
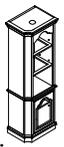
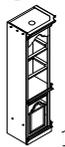


Components and Hardware List-for each Pier

<p>Left Pier</p>  <p>1 pc.</p>	<p>Right Pier</p>  <p>1 pc.</p>	<p>Screw (installed) #3x15</p>  <p>12 pcs.</p>	<p>Adjustable Shelf Support (installed)</p>  <p>12 pcs.</p>
<p>Lower Adjustable Shelf (installed)</p>  <p>Left Pier Shelf</p>	<p>Upper Adjustable Shelf Frame (installed)</p>  <p>Right Pier Shelf</p>	<p>Shelf Glass</p>  <p>2 pcs.</p>	<p>Anti-Tipping Restraint Kit</p>  <p>1 set</p>

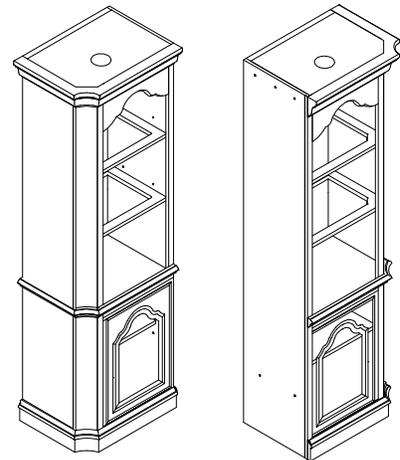

21548 & 21748
Left Pier

21549 & 21749
Right Pier

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.



ASSEMBLY STEPS:

- After moving the Pier Cabinet to it's final location in the room next to the TV Console, insert the Shelf Pins (C) into the holes in the side panels in the upper section and in the side panels of the lower section, at the desired level and place the shelves on them as shown. Place the Shelf Glass (F) into the Shelf Frames.

There are levelers located in the bottom which can be adjusted to compensate for uneven flooring if needed.

Note: The control point for the Touch-Lights is the metal plate mounted to the back side of this apron in the Left Hand Pier Cabinet.


The lights installed in the top of both Pier Cabinets must be connected together. The male Plug on the cord of the Right Hand Pier must be connected to the female Plug cord of the Left Hand Pier. The lights in both cabinets are controlled by touching the metal plate mounted in the Left Hand Pier Cabinet.

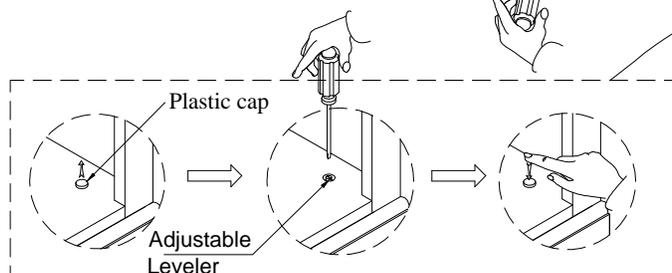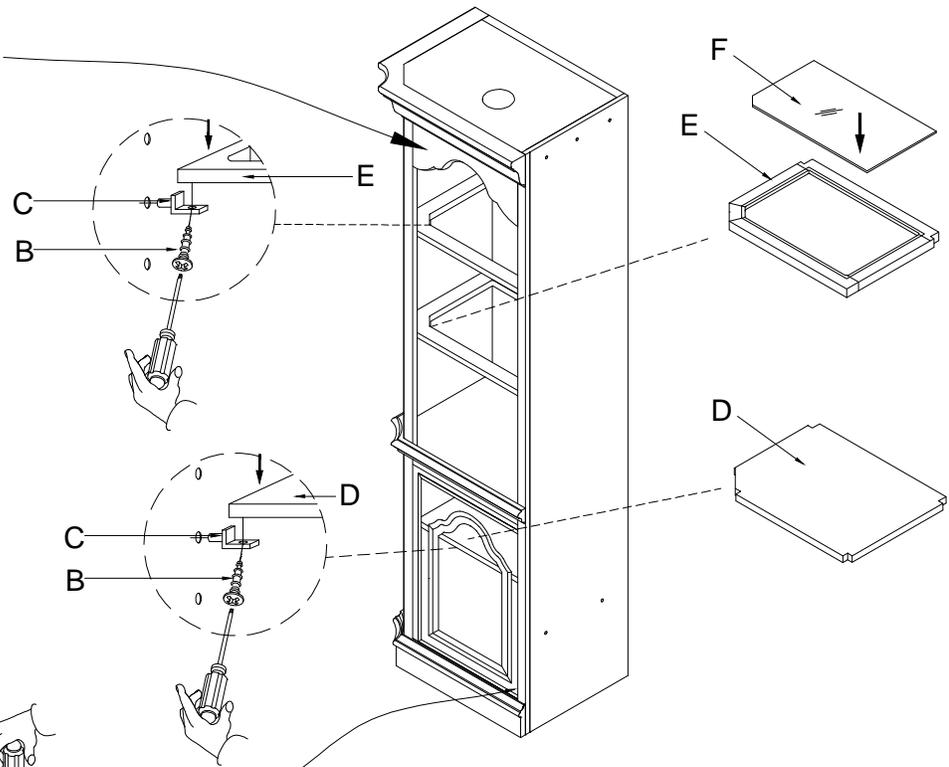

The Levelers located under the front corners can be adjusted if necessary to compensate for uneven flooring. Remove the plastic caps from the holes behind the doors. Tilt the Pier Cabinet towards the wall and using your screwdriver on top of the leveler, screw the leveler up or down as needed.

Anti-Tip Hardware Installation Instructions

Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

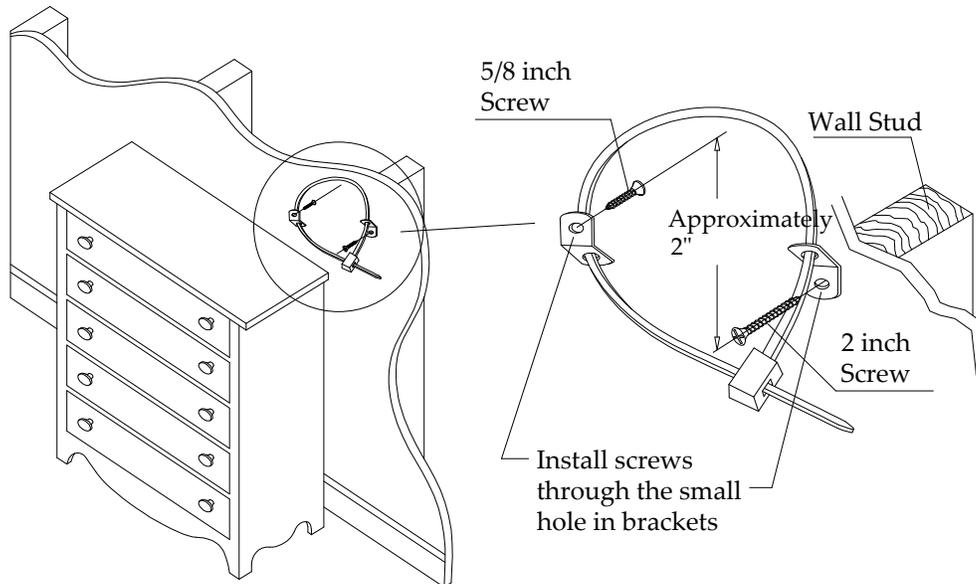


1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the 2 inch long Wood Screws provided. It may be necessary to drill $3/32$ dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the 5/8 inch long Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.

The lights in both Piers are controlled by a three-stage touch switch which connects to the top apron of the Left Hand Pier. The male plug of the light mounted in the right hand pier cabinet must be connected to the female plug of the light in the left hand pier.

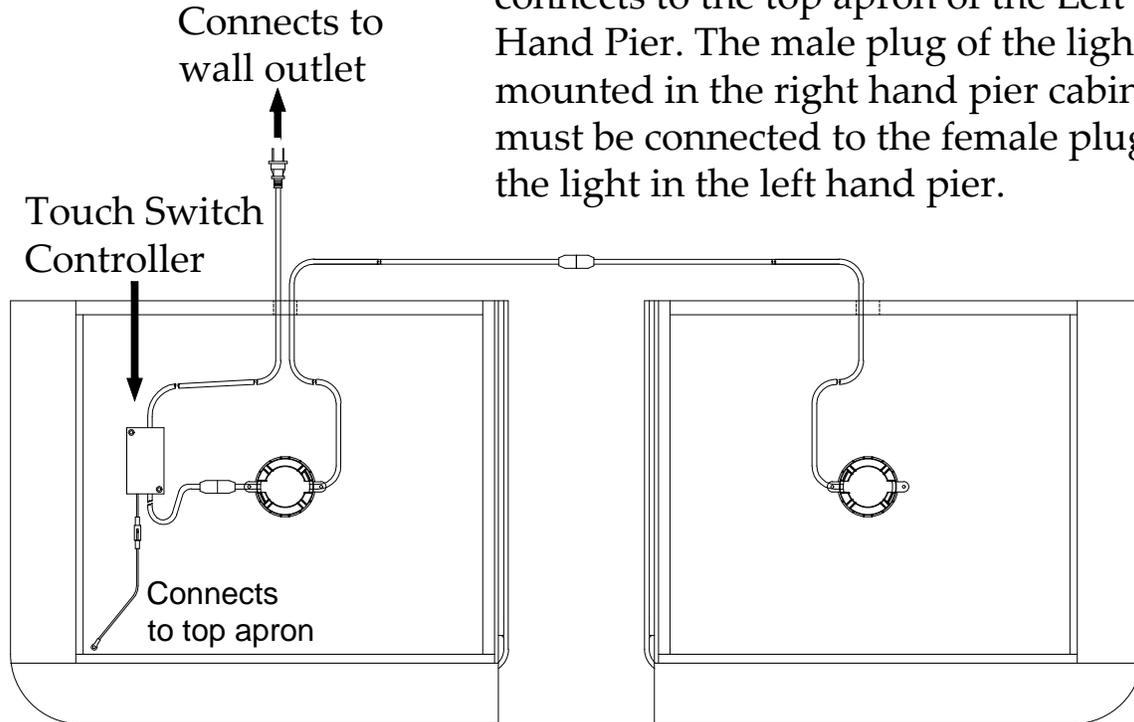


The lights in these cabinets are Light Emitting Diode (LED) fixtures which have a normal life expectancy of several years when used in a normal home environment.

Although the entire fixture set has been checked at the factory, if the lights do fail to operate, the most common problem preventing the lights from working is probably a loose connection within the wiring. Verify the light is plugged into a working electrical wall outlet and check that all wiring connections are secure.

The 'bulb' or LED contained within the fixture is not a replaceable part.

If the light will not operate after checking all electrical wiring connections, contact Customer Service.

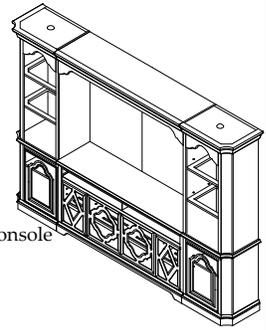

Components and Hardware List

<p>Bolt $\varnothing 1/4-20 \times 25\text{mm}$</p>  <p>A 4 pcs.</p>	<p>Allen Wrench 4mm</p>  <p>B 1 pc.</p>	<p>Cap Nut $\varnothing 1/4-20 \times 15\text{mm}$ (installed)</p>  <p>C 4 pcs.</p>	<p>21541/21741 Entertainment Console 21544/21744 Bridge 21545/21745 Back Panel 21548/21748 Left Pier 21549/21749 Right Pier</p>
<p>$\varnothing 1/4-20 \times 1-1/2"$ Long Allen Head Bolt</p>  <p>D 6 pcs.</p>	<p>Lock Washer $\varnothing 1/4"$</p>  <p>E 6 pcs.</p>	<p>Flat Washer $\varnothing 1/4"$</p>  <p>F 6 pcs.</p>	

Note:

The following steps must be performed to the Bridge, TV Console and Left and Right Piers before they are arranged and connected together.

- 1: Bridge--Attach the Mounting Plates to the top ends using the Bolts, Spring Washers and Flat Washers. Tighten with the Allen Wrench. The Mounting Plates are only intended to help support the Bridge while it is being connected to the Pier Cabinets, and must not be used as the only method of support.
- 2: TV Console--Assemble the Back Panel Rail to the top back using the Bolts, Spring Washers, and Flat Washers. Tighten with the Allen Wrench. Using the Allen Wrench, remove the short Bolts mounted to the Cap Nuts, from the sides of the Console.
- 3: Left and Right Piers--Using your Phillips Screwdriver, remove the top panels from the top of the cabinets and lay the panels and screws aside.
- 4: Carefully move the TV Console to where it will be used in the room.
- 5: Lean the back of the assembled Back Panels against the wall behind the TV Console.
- 6: Carefully move the Left and Right Pier Cabinets to be snug to the ends of the TV Console. Connect the Pier Cabinets to the Console using the Bolts (A). Tighten with the Allen Wrench.
- 7: Using two people, carefully place the Bridge onto and between the top of the Pier Cabinets. It is advisable that one person continue to support the Bridge while it is being connected to the Pier Cabinets, using the Allen Head Bolts, Spring Washers and Flat Washers packed with the Bridge. Tighten Bolts using the Allen Wrench.
- 8: Connect the wires of the lights from the Right Pier to the Left Pier. Plug the lights into a working wall receptacle and check the lights to verify they are working. If necessary check all wiring connections.
- 9: Replace the panels on top of the Pier Cabinets.
- 10: Lift the Back Panels, inserting the top edge into the groove at the back of the Bridge, pull the panels to the back of the Pier Cabinets and drop down into the groove at the back of the TV Console.

The assembly is now complete.

