 
 
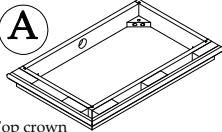 
 






 

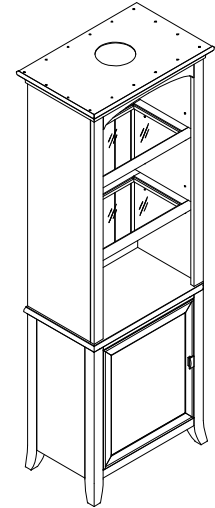 


Components and Hardware List

A  Top crown 1 pc	B  Wood Shelf 1 pc	C  Wood Frame Shelf 2 pcs	D  Shelf Glass 2 pcs
E  Shelf Pin 8 pcs	F  Screw 24 pcs	G  M ₄ Flat Washer 4 pcs	H  M ₄ Spring Washer 4 pcs
I  M ₄ x 1-1/4" Flat Head Bolt 4 pcs	J  M ₄ Allen Head Bolt 1 pc	K  Top panel 1 pc	L  Anti-tipping Restraint kit 1 pc.

 


65348 & 65349 Pier

WARNING!!!

RISK OF FIRE / INJURY / BURN TO PERSONS / PROPERTY.
KEEP COMBUSTIBLES AWAY FROM LIGHTING FIXTURE.
TURN OFF / UNPLUG TO CHANGE BULB. DO NOT TOUCH
HOT BULB. DO NOT OPERATE LIGHT IF DAMAGED.
Use only the same type of replacement bulbs and with maximum
wattage rating as Indicated In the lighting fixture.
The lights are controlled by a touch button that is mounted In the
top of the Pier Cabinet.

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

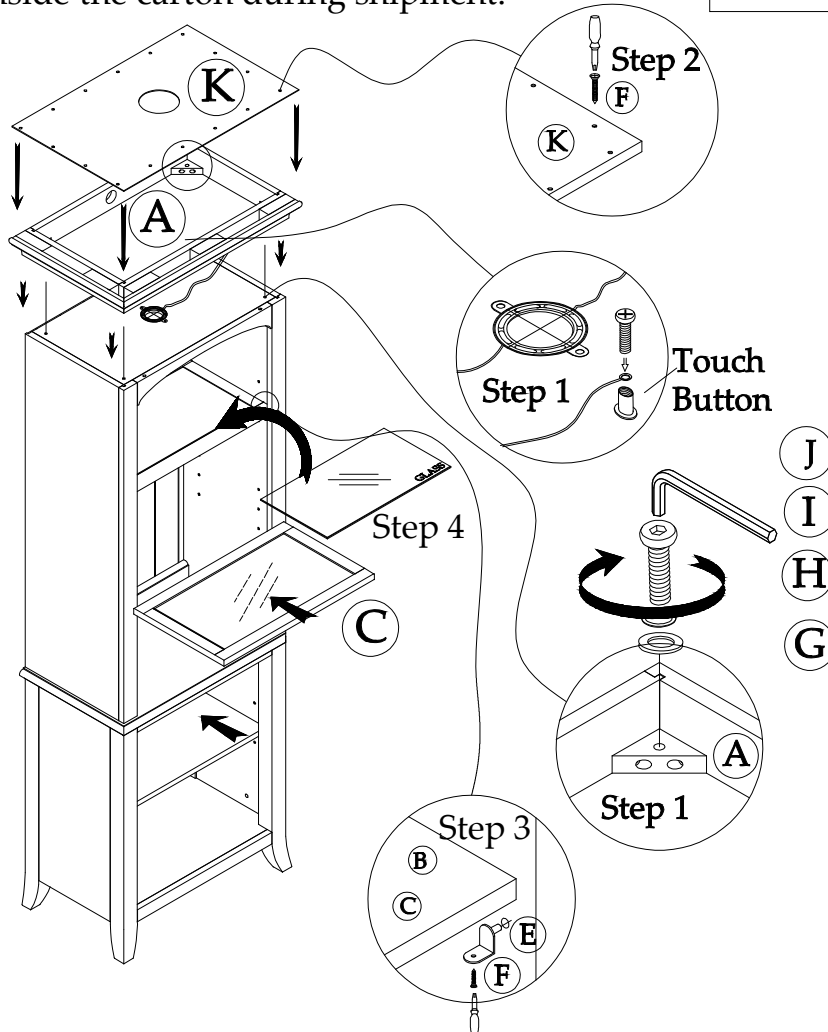

Step 1: Position and attach the Crown (A) on top of the Pier using the Allen Bolt (I), Spring Washer (H), and Flat Washer (G). Tighten using the Allen Wrench (J).





 
Connect the wire from the Light controller to the Touch Button going through the top of the Pier.


After the TV Console and Pier Cabinets are set-up together, the Light of the Right Hand Pier will be connected to the Light of the Left Hand Pier. Please refer to additional instructions provided.

Step 2: Place the Top Panel (K) on top of the Crown (A), fasten with screws (F) to fix the Top Panel.

Step 3: Insert Shelf Pins (E) into selected level of holes in the side panels. Place the Wood Shelf (B) on the pins in the lower area & Wood Frame Shelf (C) onto the shelf pins.


Step 4: Insert Shelf Glass (D) into the Wood Shelf Frames.

Product No.	Product Description	Components and Hardware List				
65340	Console	(A)	(B)	(C)	(D)	(E)
65348	Left Pier					
65349	Right Pier	M5/16" Flat Washer	M5/16" Spring Washer	M5/16" x 1-1/4" Flat Head Bolt	Allen Head Bolt	
65343	Bridge & Back Panel	4PCS	4PCS	4PCS	1PC	4PCS

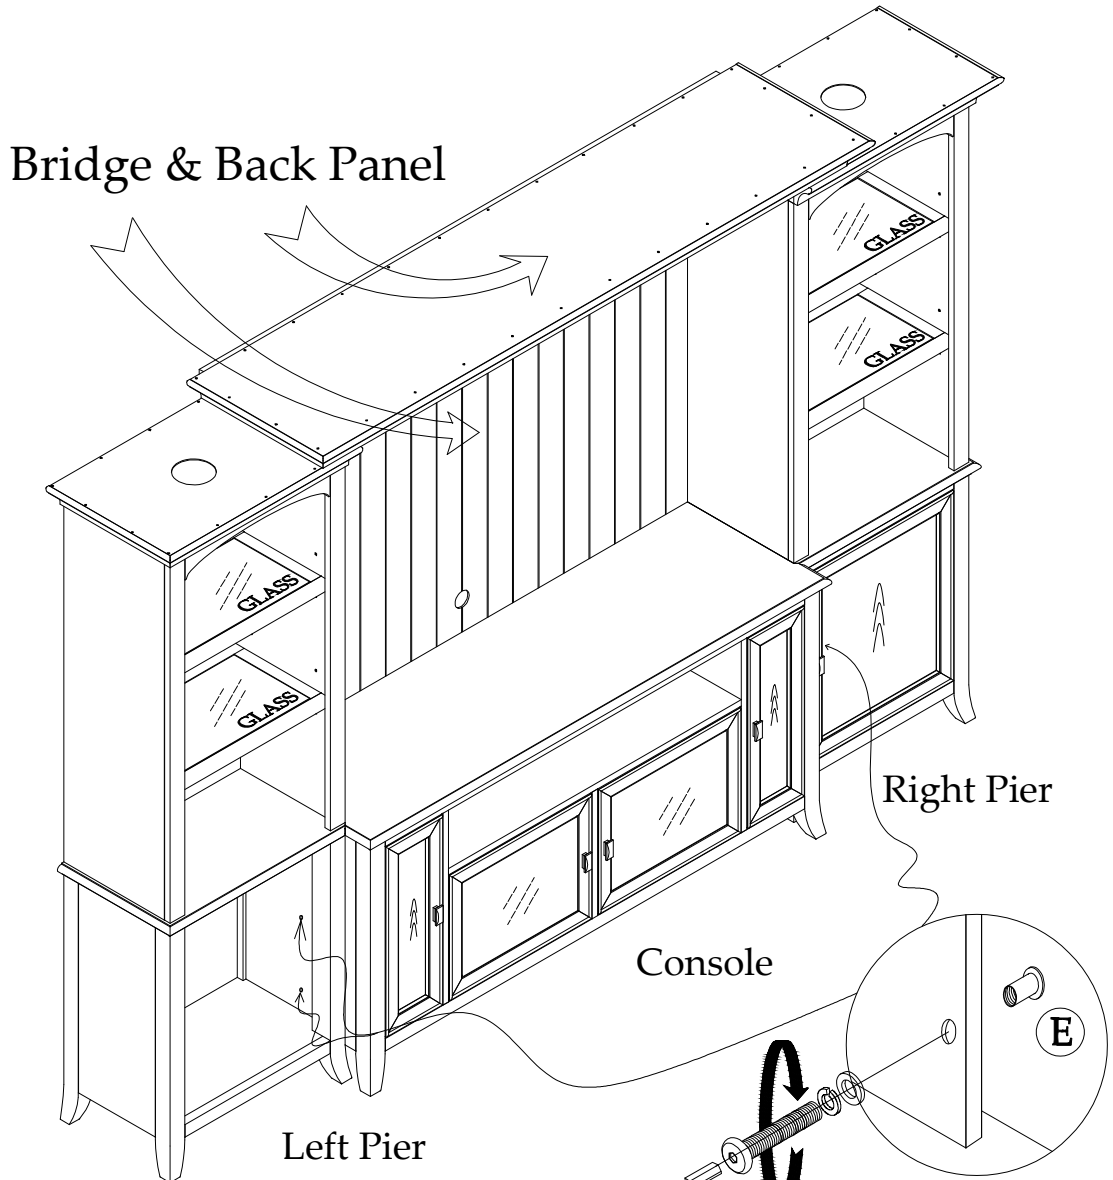 

Step 1: The Left and Right Piers can be connected to the TV Console if desired using the Allen Bolt (C), Spring Washer (B) and Flat Washer (A), and the Connector Cap (E). Tighten with the Allen Wrench (D).

 Light Wiring Diagram for Left and Right Pier Cabinets

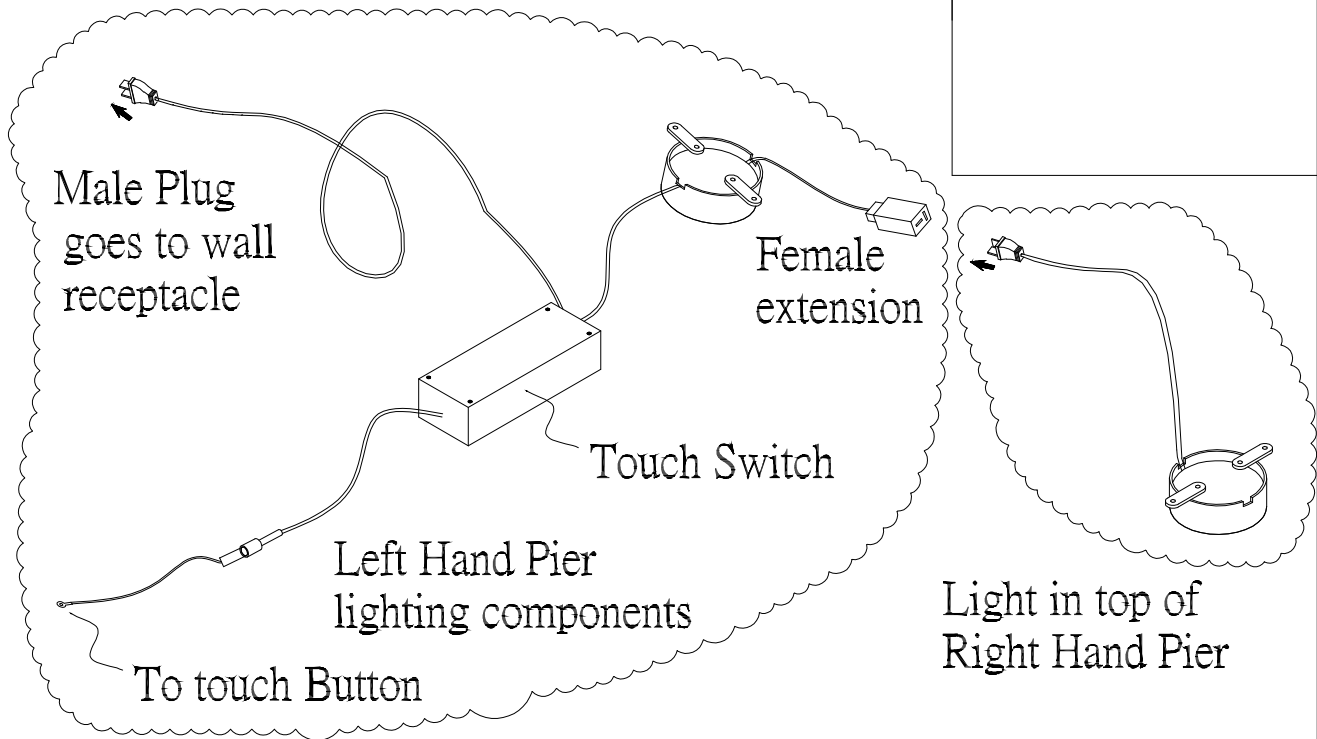

- A. The button under the top of the Left Hand Pier cabinet is the touch point that controls the three-stage touch switch for the entire lighting system for the Left and Right Hand Pier Cabinets. The male standard electrical plug must be connected to an active (live) wall outlet to supply power to the entire system. The light in the top of the Right Hand Pier cabinet must be connected to the light of the Left Hand Pier as shown above to operate.

If either light will not turn on, begin checking all connections.

The halogen bulbs used in these fixtures can become very hot. Because the halogen lamp operates at very high temperatures, it can pose fire and burn hazards. Never operate a halogen lamp without the fixture's lens in place to prevent accidental burns or ignition of flammable objects coming into contact with the bulb, and to reduce the UV radiation exposure from the burning lamp.

Refer to following pages for additional troubleshooting instructions.

email: info@riverside-furniture.com

As the first step in you receiving a quality product, all lighting and electrical products installed in your furniture are checked at the factory before the furniture is packaged. Occasionally however, some connections do not stay firmly intact or other problems develop and the lights do fail to operate. To troubleshoot non-functioning electrical problems follow the steps listed below.

1. Beginning with the most obvious, make sure you have the electrical cord plugged into a working electrical outlet. If there is a wall switch that controls the electrical outlet the light is plugged into, be sure it is turned on.
2. Do any of the lights in your furniture work?
3. Locate the light switch and make sure it is turned on. We use different types of switches to control the lighting in our furniture; a push button, twist knob on-off with dimmer, or a touch switch on-off with dimmer.
4. A: If a Push Switch is used, look for a small push button on-off switch, normally extending through the bottom side of the top panel of the furniture. Push on, Push off.
B: If a Twist Knob Switch is used, look for a small twist knob, normally extending through the bottom side of the top panel of the furniture. Twist on one direction, Twist the other direction for off.
C: If your cabinet is equipped with a three-stage Touch Switch, there may be a wire attached to a top door hinge, which is the touch point for the light. There could also be a metal button or other metal object normally mounted to the bottom side of the top panel, which could be the touch point for the light. The first three touches bring the light to low, medium, and high brightness. Touching the fourth time will turn the light off.
5. Be sure the light fixture is plugged into the switch mechanism. Usually this wiring is concealed in the top of the furniture. On touch dimmers, there is also a wire that goes to the hinge or touch button. Be sure it is connected to the switch box and to the touch point and if there is a connection between the hinge or touch button and switch box, make sure it is firmly connected together.
6. If the furniture has more than one light, verify that all the lights are connected.
7. Check sockets for damage and be sure the bulbs are installed properly. Test bulbs to see if they are good. See the precautions below for Halogen Bulbs. If the bulbs are bad, replace bulbs. Never use a bulb with a higher wattage than the fixture is designed for as indicated on a label or stamped onto the fixture.
8. In almost all instances if it is not the bulb, the problem is a malfunctioning switch or dimmer. Replace the switch or dimmer as required by the case.

Some of the lighting in our furniture is "hardwired together" meaning all connections are made at the factory and enclosed within the light fixture or within the switch box, etc. and are not consumer accessible or repairable. Sometimes the different components (lights or switches) use insulated connectors that are pushed or plugged into each other and are consumer accessible and can be checked if needed. If these are not firmly connected together this could cause a light not to function. All connectors should be checked to verify they are firmly connected.

Handling Precautions of Halogen Bulbs

Any surface contamination, notably fingerprints, can damage the halogen bulb when it is heated. Contaminants will create a hot spot on the glass bulb surface when the bulb is turned on. Consequently, manufacturers recommend that halogen lamps should be handled without touching the clear glass, either by using a clean paper towel, cotton gloves or carefully holding the porcelain base. If the glass is contaminated in any way, it must be thoroughly cleaned with rubbing alcohol and dried before use.

Safety of Halogen Bulbs

Halogen lamps get hotter than regular incandescent lamps because the heat is concentrated on a smaller bulb surface, and because the surface is closer to the filament. This high temperature is essential to their operation. Because the halogen lamp operates at very high temperatures, it can pose fire and burn hazards. Never operate a halogen lamp without the fixture's lens in place to prevent accidental burns or ignition of flammable objects coming into contact with the bulb, and to reduce the UV radiation exposure from the burning lamp.

Replacement bulbs are available at most home improvement or hardware stores.

Before replacing halogen puck light bulb, unplug power cord from wall outlet to remove power to fixture.

To replace bulb, twist lens cover counter-clockwise and lift off cover to remove.

 
 
Grasp old bulb and pull straight out of socket.

Install new bulb by inserting pins firmly and fully back into socket. **DO NOT TOUCH NEW BULB WITH BARE FINGERS.**

Please see instructions.


Replace lens cover back on fixture and lock in position by twisting cover clockwise.

To remove lens cover

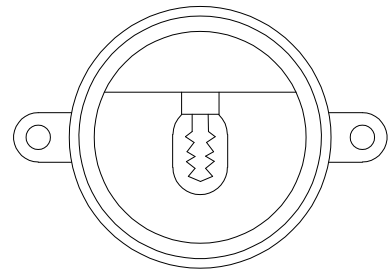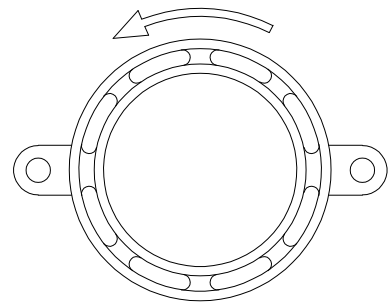

Anti-Tip Hardware Installation Instructions

 Notice: Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

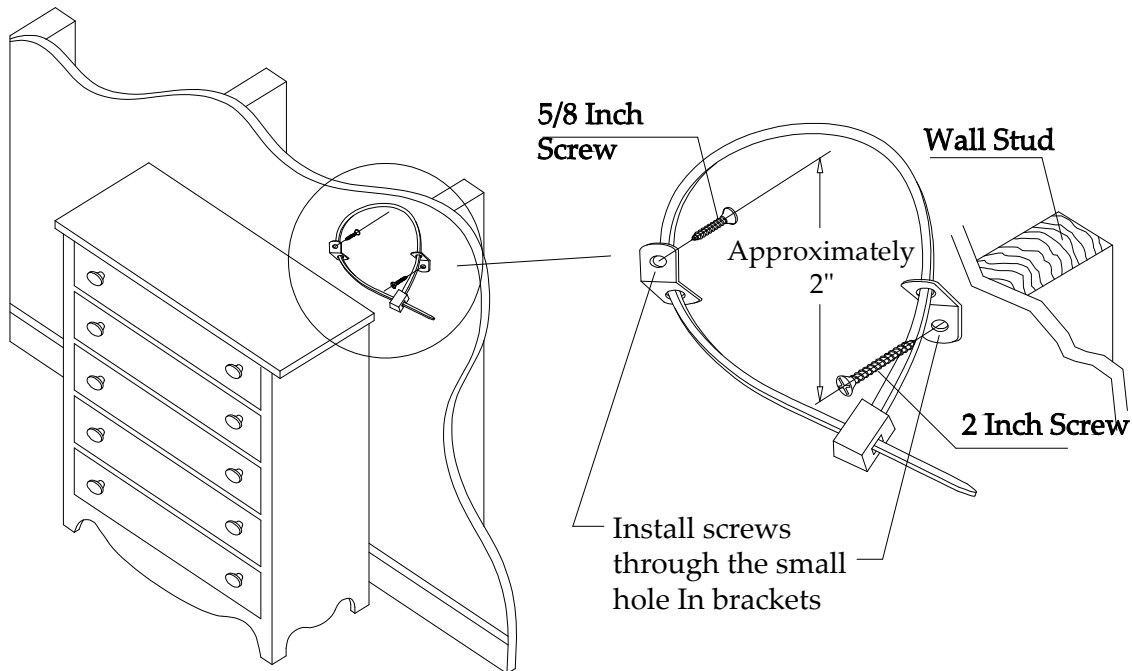

1. Temporarily locate the furniture to near its final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 Inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 Inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.