


Components and Hardware List

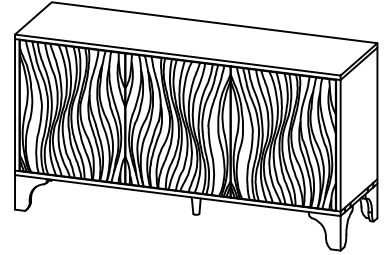

**53840
TV CONSOLE**

<p>Console</p> <p>(A) 1 pc.</p>	<p>Leg</p> <p>(B) 4 pcs.</p>	<p>Center Leg</p> <p>(C) 1 pc.</p>	<p>Ø1/4 x 1 1/2" Allen Head Bolt</p> <p>(D) 12 pcs.</p>
<p>5/8" x 1/16" Flat Washer</p> <p>(E) 12 pcs.</p>	<p>5/8" x 1/16" Lock Washer</p> <p>(F) 12 pcs.</p>	<p>4mm Allen Wrench</p> <p>(G) 1 pc.</p>	<p>Furniture Tipping Restrain Kit</p> <p>(H) 1 pc.</p>

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

To prevent possible scratches and damage, this furniture should be assembled on a soft surface such as a blanket or carpet.

