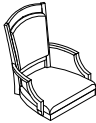
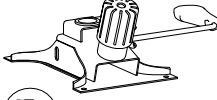
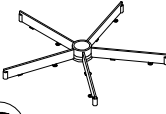

 

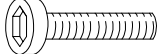

 

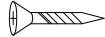
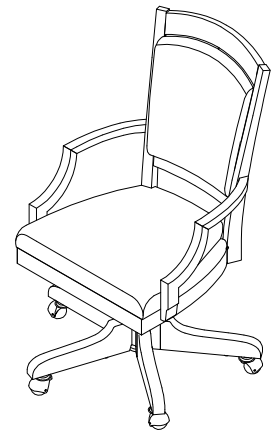


Components and Hardware List

<p>Chair Seat & Back</p>  <p>A 1 pc.</p>	<p>Chair Control Plate</p>  <p>B 1 pc.</p>	<p>Metal Base</p>  <p>C 1 pc.</p>	<p>Wood Cap</p>  <p>D 5 pcs.</p>
<p>Pneumatic Cylinder & Cover</p>  <p>E 1 pc.</p>	<p>Caster</p>  <p>F 5 pcs.</p>	<p>M1/4"-20 x 1-1/8" Long Allen Head Bolt</p>  <p>G 4 pcs.</p>	<p>M1/4" Spring Washer</p>  <p>H 4 pcs.</p>
<p>M1/4" *19*2mm Flat Washer</p>  <p>I 4 pcs.</p>	<p>4mm Allen Wrench</p>  <p>J 1 pc.</p>	<p>#6 x 5/8" Screw</p>  <p>K 10 pcs.</p>	<p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. To prevent scratches or damage, assemble the chair on a soft surface such as a blanket or carpet.</p>

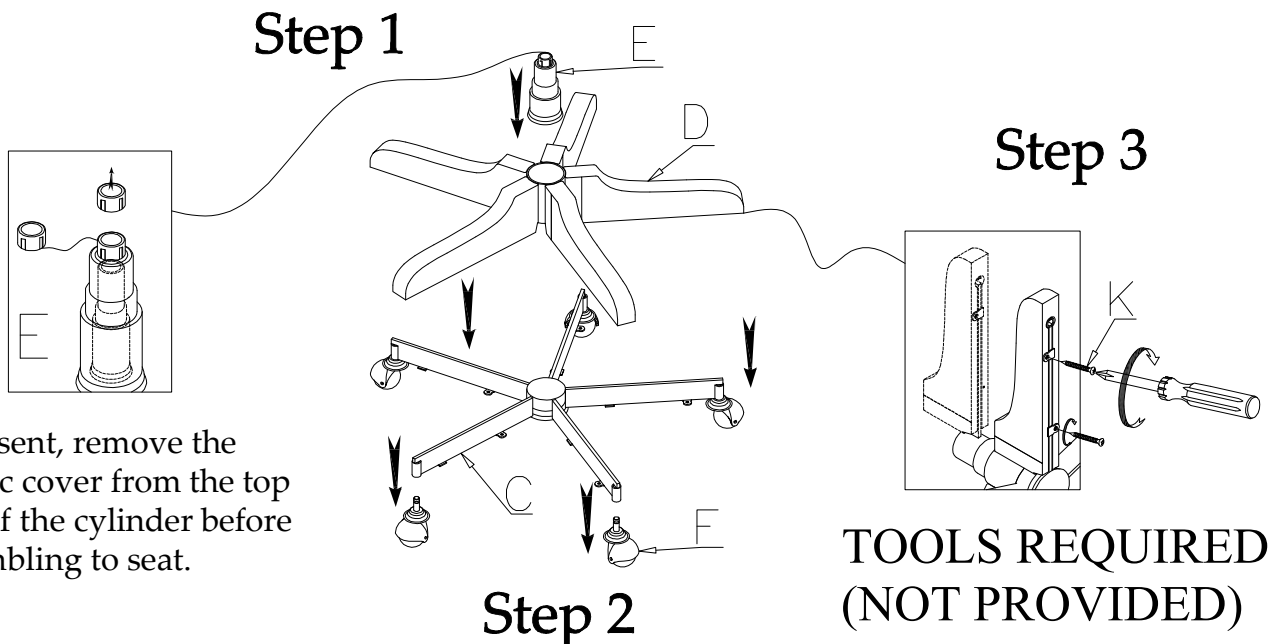


#59428
Upholstered Desk Chair

STEP 1 : Fit the bottom end of the pneumatic Cylinder (E) into center of the Metal Base Frame as shown. Press down firmly on the Pneumatic Cylinder to secure.

STEP 2 : Press the caster (F) into the holes of the Metal Base Frame.

STEP 3 : Attached the Wood Caps (D) to the Metal Base (C) by using Screws (K) and your Phillips Screwdriver as shown.



If present, remove the plastic cover from the top end of the cylinder before assembling to seat.

STEP 4 : Attach the Seat Control (B) to the of the Chair Seat & Back (A) with Flat Washers (I), Spring Washers (H) and Allen Head Bolts (G) as shown. Tighten with the Allen Key (J).

STEP 5 : Fit the top of the Pneumatic Cylinder into the Seat Control. Carefully sit on the seat to secure assembly.

Note: To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring.

The lift mechanism is in a locked position for shipping . To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.

