Riverside
FURNITURE

email: info@riverside-furniture.com

Aberdeen Queen Bed Assembly Instructions

Made in Viet Nam

Hardware and Parts packed with the Headboard

Headboard Panel

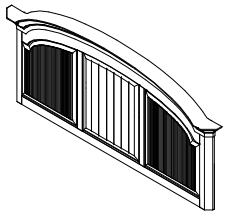

H-A 1 pc.

Headboard Post



H-B One Left & One Right

Headboard Stretcher

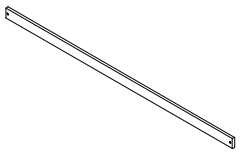

H-C 1 pc.

Ø5/16"-18 x 1-3/4 " Long Allen Head Bolt



H-D 8 pcs.

5/16" Spring Washer

H-E 8 pcs.

5/16" x 19mm x 2mm Flat Washer

H-F 8 pcs.

5mm Allen Wrench



H-G 1 pc.

Hardware and Parts packed with the Footboard

Footboard

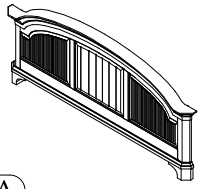

F-A 1 pc.

5/0 Wood Slat 60-3/4" long



F-B 4 pcs.

Slat Support Leg including leveler 8-1/8" long

F-C 4 pcs.

#8 x 1" Wood Screw



F-D 8 pcs.

Hardware and Parts packed with the Bed Rails

Bed Rail

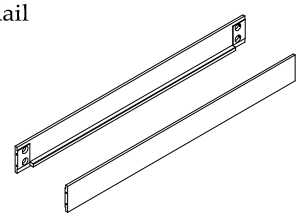

R-A 2 pcs.

Ø5/16"-18 x 3-1/2 " Long All-Thread Bolt

R-B 8 pcs.

Ø5/16-18 x L17 Hex Nut

R-C 8 pcs.

5/16" Spring Washer

R-D 8 pcs.

5/16" x 16 x2mm Flat Washer

R-E 8 pcs.

Ø50mm Arc-Washer

R-F 8 pcs.

12mm Open Wrench

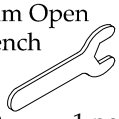

R-G 1 pc.

5/0 Queen Bed
21270 -- 4/6-5/0 Reeded Headboard
21271 -- 5/0 Reeded Footboard & Slats
21272 -- 5/0-6/6 Bed Rails (for 5/0 Bed)

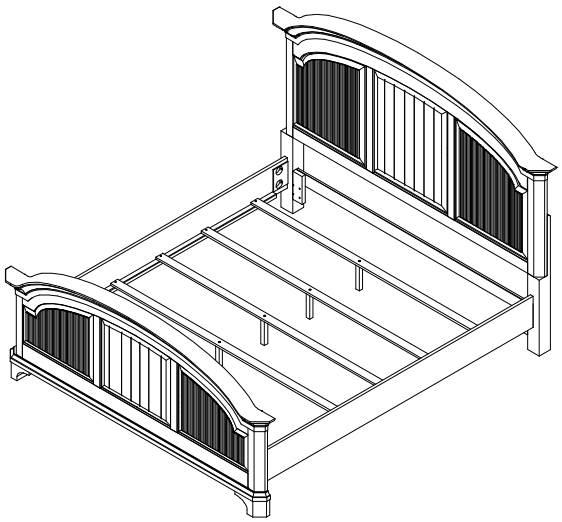

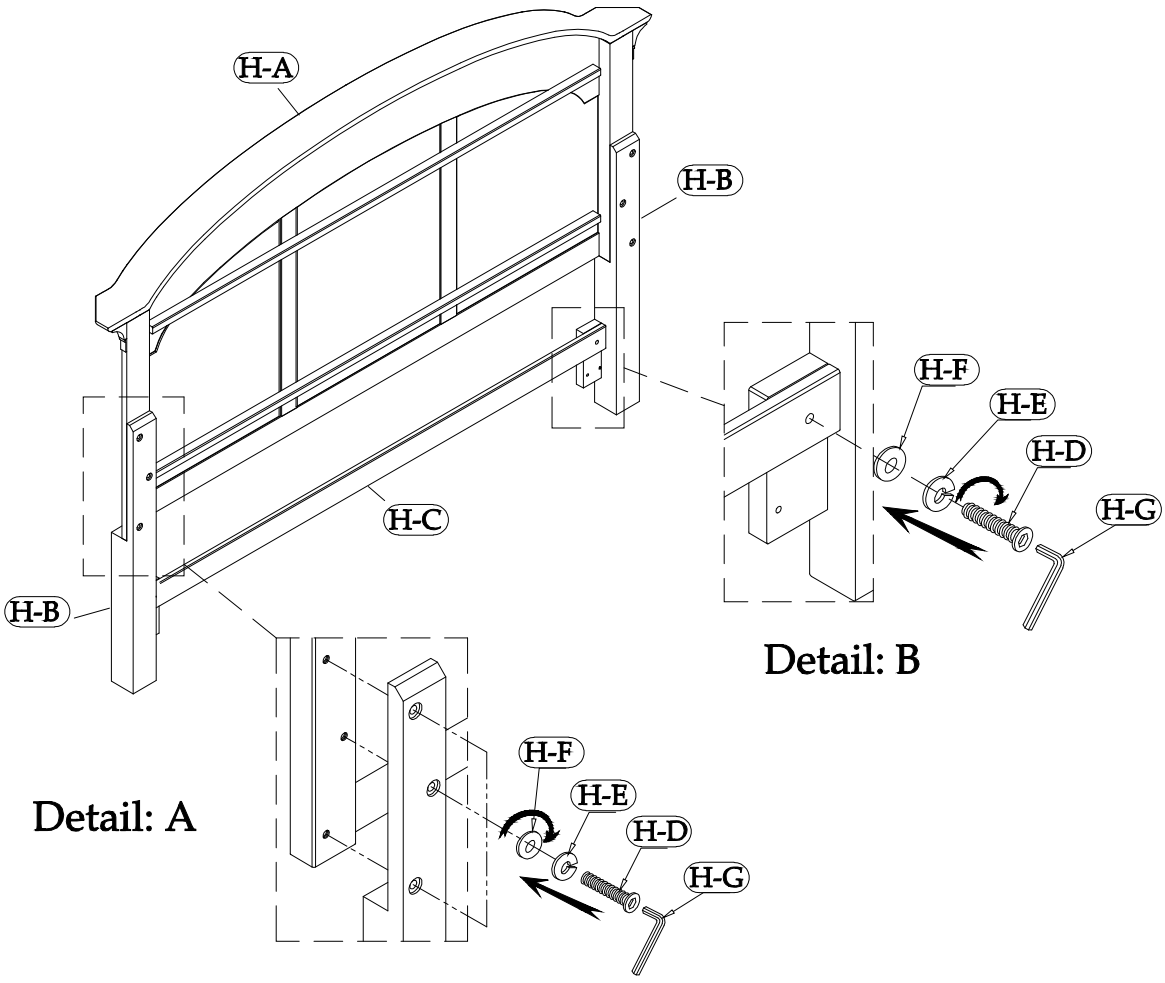

ASSEMBLY STEPS :

1. Place the Headboard Panel (H-A) face down on a clean and soft surface.
2. Attach the Left and Right Headboard Posts (H-B) to the back of the Headboard Panel, using the Flat Washers (H-F), Spring Washers (H-E) and 1-3/4" Long Bolts (H-D). Do not fully tighten until after next step. (see Detail A).
3. Attach the Headboard Stretcher (H-C) to the Headboard Posts using the same Washers and Bolts (H-D) as in previous step.
4. Tighten all Bolts using the Allen Wrench (H-G). (see Detail A & B).

Gently lean the back of the assembled Headboard against the wall where the Bed will be located in the room.

ASSEMBLY STEPS :

To prevent possible damage to furniture and personal injury, it is recommended that two people are used to perform the following steps.

5. Install two All-Thread Bolts (R-B) into the metal threaded inserts installed in the Headboard Posts and into the metal inserts on the Footboard.
6. Carefully position one end of one Bed Rail (R-A) onto the All-thread Bolts on the Headboard and connect using the Arc Washers (R-F), Flat Washers (R-E), Spring Washers (R-D), and Hex Nut (R-C). Only partially tighten the Nuts until the Footboard has been connected. Repeat for other Bed Rail.
7. Position and connect the Footboard (F-A) to the other end of the Bed Rails, attaching as in the previous Steps.
8. Carefully align the Footboard to be 'square' with the Headboard. Using the Open Wrench (R-G) tighten all Hex Nuts attaching the Side Rails to the Headboard and Footboard. (See Detail C).
9. Attach the four Support Legs (F-C) to the bottom side of four Wood Slats (F-B). (See Detail D).
10. Position and attach the Slats to the Bed Rails using the Wood Screws (F-D) and your Phillips Screwdriver. (See Detail E).

The levelers located at the bottom of the Support Legs can be adjusted if necessary to support the Slats.

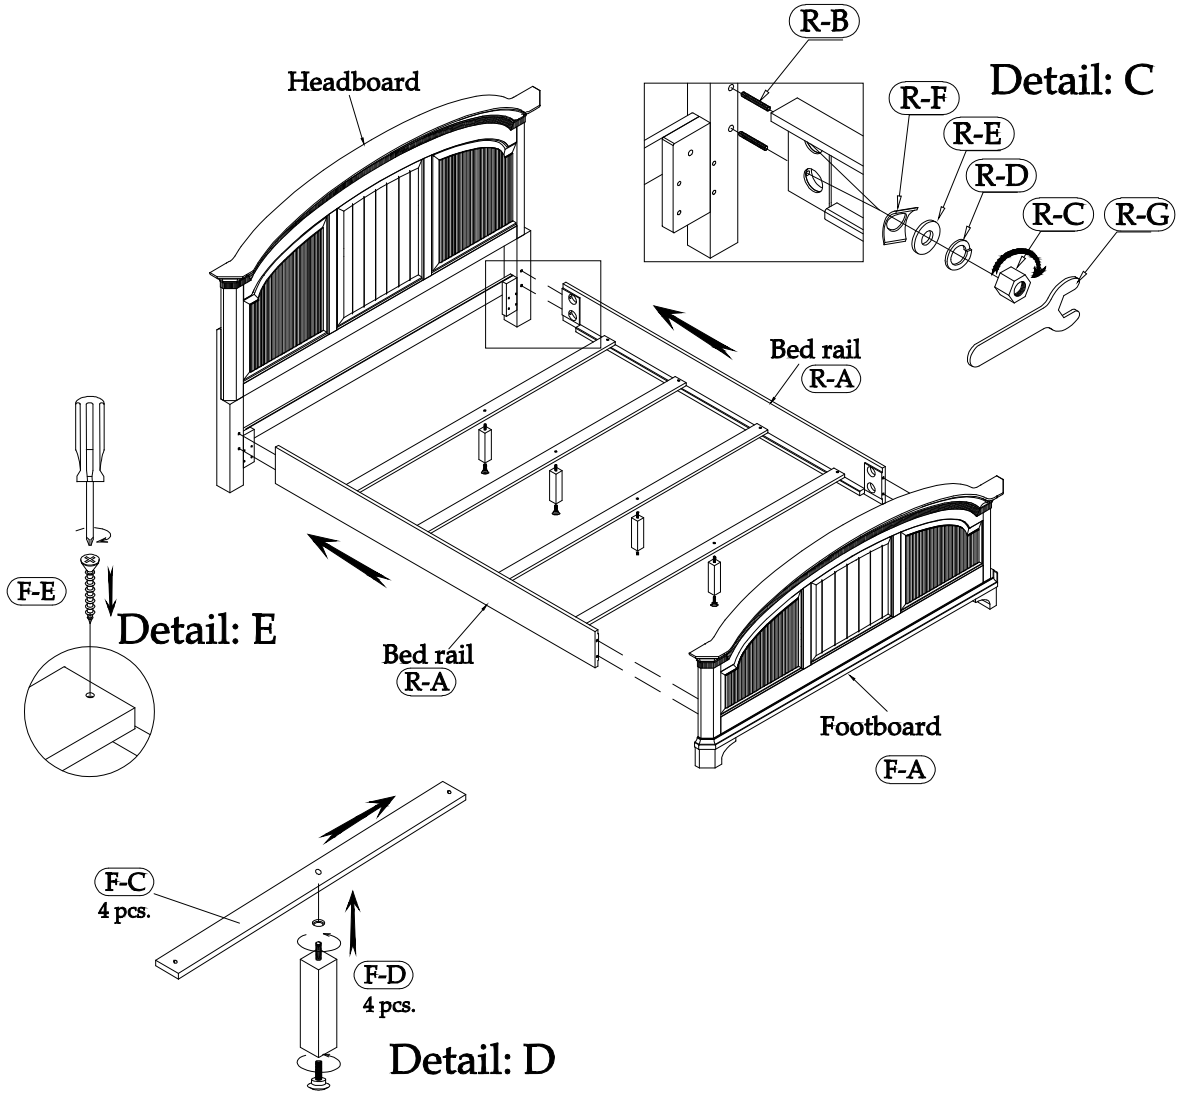

Riverside

email: info@riverside-furniture.com

21270
Queen Reeded Headboard

5/0 Queen Standard Bed

21270 -- 4/6-5/0 Reeded Headboard
21271 -- 5/0 Reeded Footboard w/Slats
21272 -- 5/0-6/6 Bed Rails
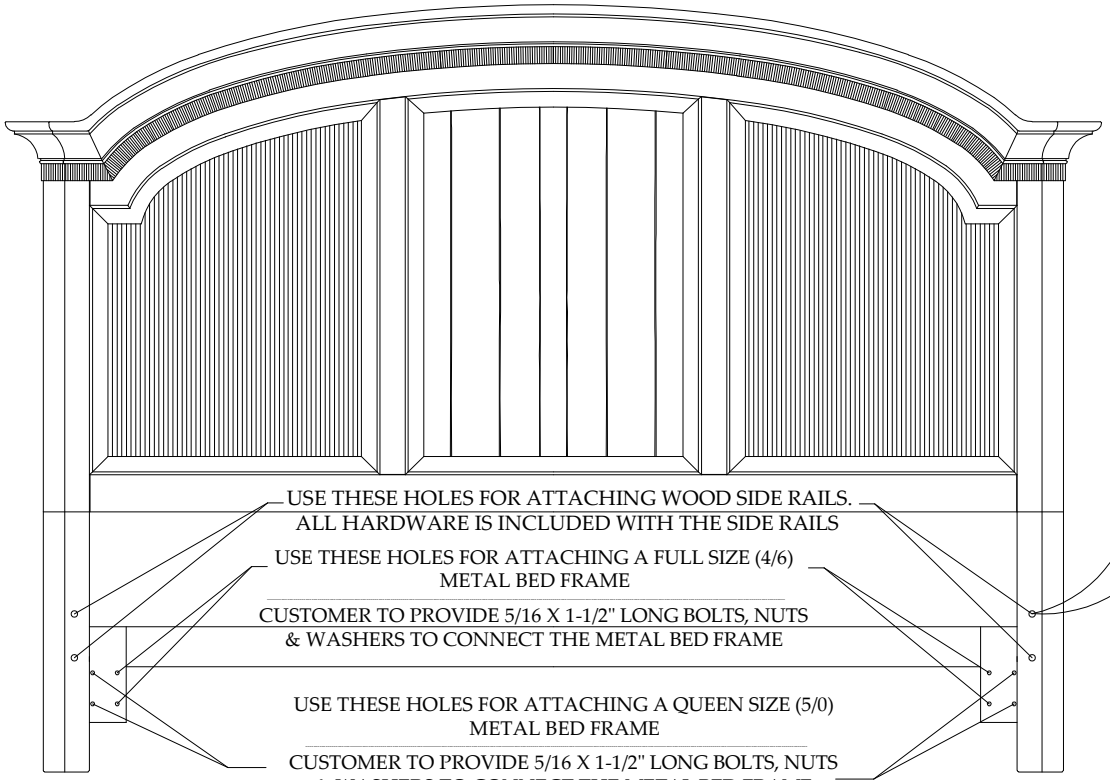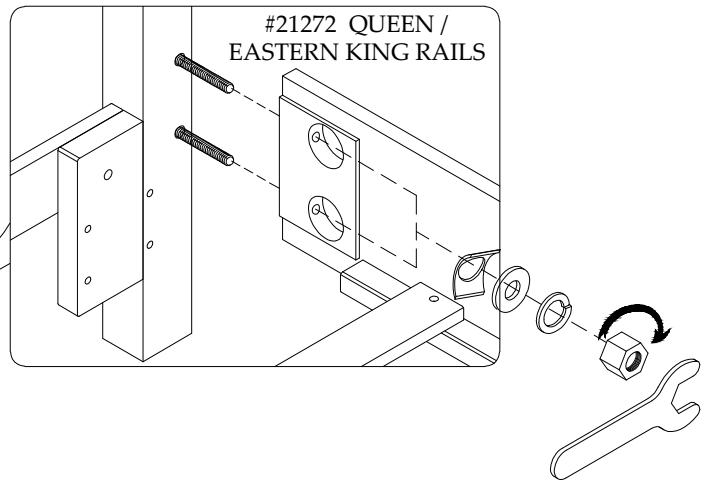
The Headboard may be used alone with a Queen or Full Size Metal Bed Frame