


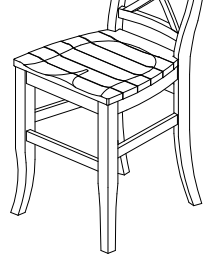











### Components and Hardware List (for one chair)

<b>Chair Back</b>  1 pc.	<b>Chair Seat</b>  1 pc.	<b>Front Leg (Right &amp; Left)</b>  2 pcs.	 #27359 & 27459 X-BACK COUNTER STOOL		
<b>Side Stretcher (Right &amp; Left)</b>  2 pcs.	<b>Front Stretcher</b>  1 pc.	Ø5/16-18 x 1-1/2" Long Allen Head Bolt  1 pc.			
Ø5/16-18 x 2-1/4" Long Allen Head Bolt  4 pcs.	Ø5/16-18 x 3-1/2" Long Allen Head Bolt  4 pcs.	5/16" Spring Washer  9 pcs.	5/16" Flat Washer  9 pcs.	5mm Allen Wrench  1 pc.	#8 x 1-1/2" Long Wood Screw  6 pcs.

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Separate, count and check all parts against the Components and Hardware List above. Failure to use the correct length bolts in the proper locations may result in an unsafe product and could also cause damage to the parts being assembled.

**Step 1:** Place the Chair Back (A) on a padded surface, and assemble the Chair Seat (B) to the Chair Back (as shown in Step 1), using the 1-1/2" long Bolts (F), in the middle of the back, and the Spring Washer (I), Flat Washers (J) as shown. Install the 3-1/2" long Bolts (H), using the same washers, into the back corners of the Chair Seat. Do not fully tighten any bolts until after chair has been completely assembled.

**Step 2:** Assemble the Left and Right Side Stretchers (D) to the Chair Back (do not install wood screws until after next step).

**Step 3:** Assemble the Front Stretcher (E) between the Front Legs and assemble the Front Legs onto the Side Stretchers and Chair Seat. Pull the Front Legs and all Stretchers snugly together to verify the parts are assembled correctly. Attach the Front Legs using the 2-1/4" long Bolts (G), and the same washers as before. Set the assembled Chair upright on a flat surface to level chair. Adjust the position of the Chair Seat, if necessary, to have the same gap at each back post. Tighten the Bolt at the middle back of the Seat first, then tighten all remaining Bolts using the Allen Wrench.

**Step 4:** Pull the Front Legs, all Stretchers and Chair Back snugly together and using your Phillips Screwdriver, install the Wood Screws (L) underneath each end of the Stretchers.

