







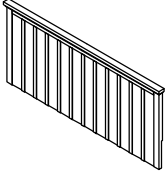


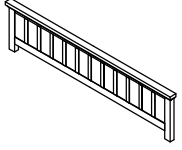
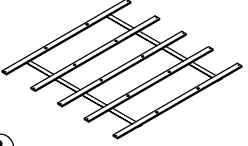


Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.




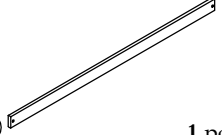



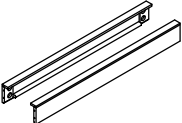






Hardware and Parts packed with the Headboard

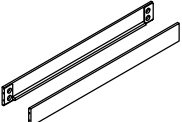Panel Headboard 37280  (H-A) 1 pc.	Headboard Post Left  (H-B) 1 pc.	Headboard Post Right  (H-C) 1 pc.	Headboard stretcher  (H-D) 1 pc.	
$\phi 5/16$ "-1- 1/2" Allen Head Bolt  (H-E) 2 pcs.	$\phi 5/16$ "-1- 3/4" Allen Head Bolt  (H-F) 6 pcs.	$\phi 5/16$ " Spring Washer  (H-G) 8 pcs.	$\phi 5/16$ " x 19*2mm Flat Washer  (H-H) 8 pcs.	5mm Allen Key  (H-I) 1 pc.


Hardware and Parts packed with the Footboard

Panel Footboard 37281  (F-A) 1 pc.	Wood Slats 77-1/4" Long  (F-B) 1 Set.	Support Leg (D) 7-1/2" x (W)1- 1/4"(H) 1- 1/4"  (F-C) 10 pcs.	#8 x 1" Wood Screw  (F-D) 10 pcs.
--	--	--	--


Hardware and Parts packed with the Bed Rail

Bed Rails 37272  (R-A1) 2 pcs.	$\phi 5/16$ x 3-1/2" All-Thread Bolt  (R-B) 8 pcs.	$\phi 5/16$ " Curved Washer  (R-C) 8 pcs.	$\phi 5/16$ " x 16*2mm Flat Washer  (R-D) 8 pcs.	$\phi 5/16$ " Spring Washer  (R-E) 8 pcs.	$\phi 5/16$ x L17 Nut  (R-F) 8 pcs.	Open Wrench 12mm  (R-G) 1 pc.
Bed Rails 37282  (R-A2) 2 pcs.	$\phi 5/16$ x 3-1/2" All-Thread Bolt  (R-B) 8 pcs.	$\phi 5/16$ " Curved Washer  (R-C) 8 pcs.	$\phi 5/16$ " x 16*2mm Flat Washer  (R-D) 8 pcs.	$\phi 5/16$ " Spring Washer  (R-E) 8 pcs.	$\phi 5/16$ x L17 Nut  (R-F) 8 pcs.	Open Wrench 12mm  (R-G) 1 pc.

- 6/0-6/6 King Bed**
37280 --6/0-6/6 Panel Headboard
37281 --6/6 Panel Footboard
37272 --5/0-6/6 Panel Bed Rails
37282 --6/0 Panel Bed Rails

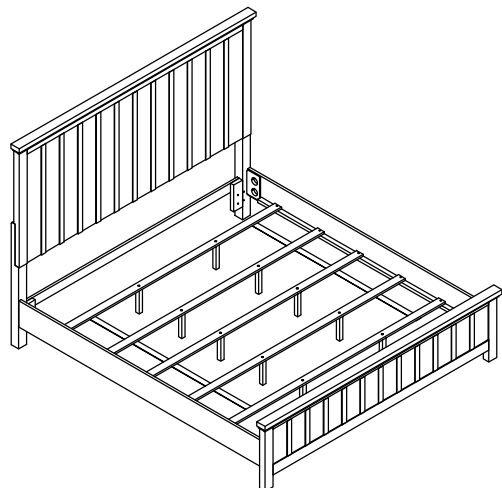


6/0- 6/6 King Bed
37280 -- 6/6-6/0 Panel Headboard


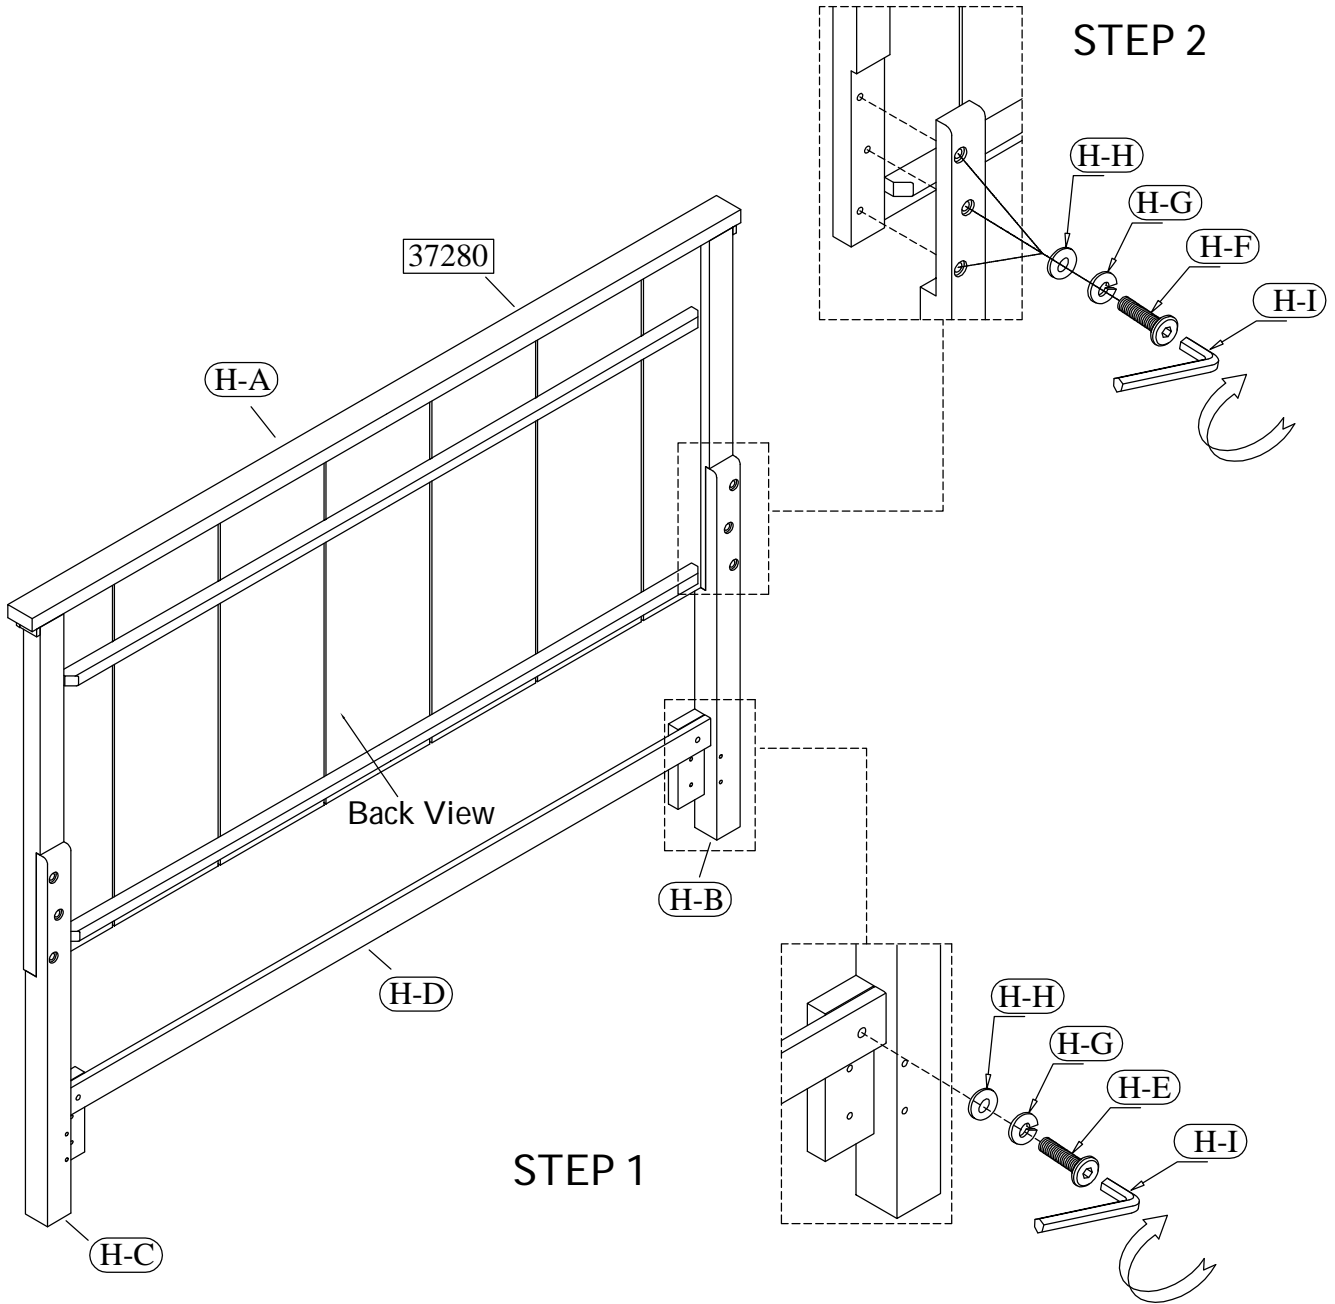


6/0-6/6 King Bed
37280 --6/0-6/6 Panel Headboard
37281 --6/6 Panel Footboard

STEP 3

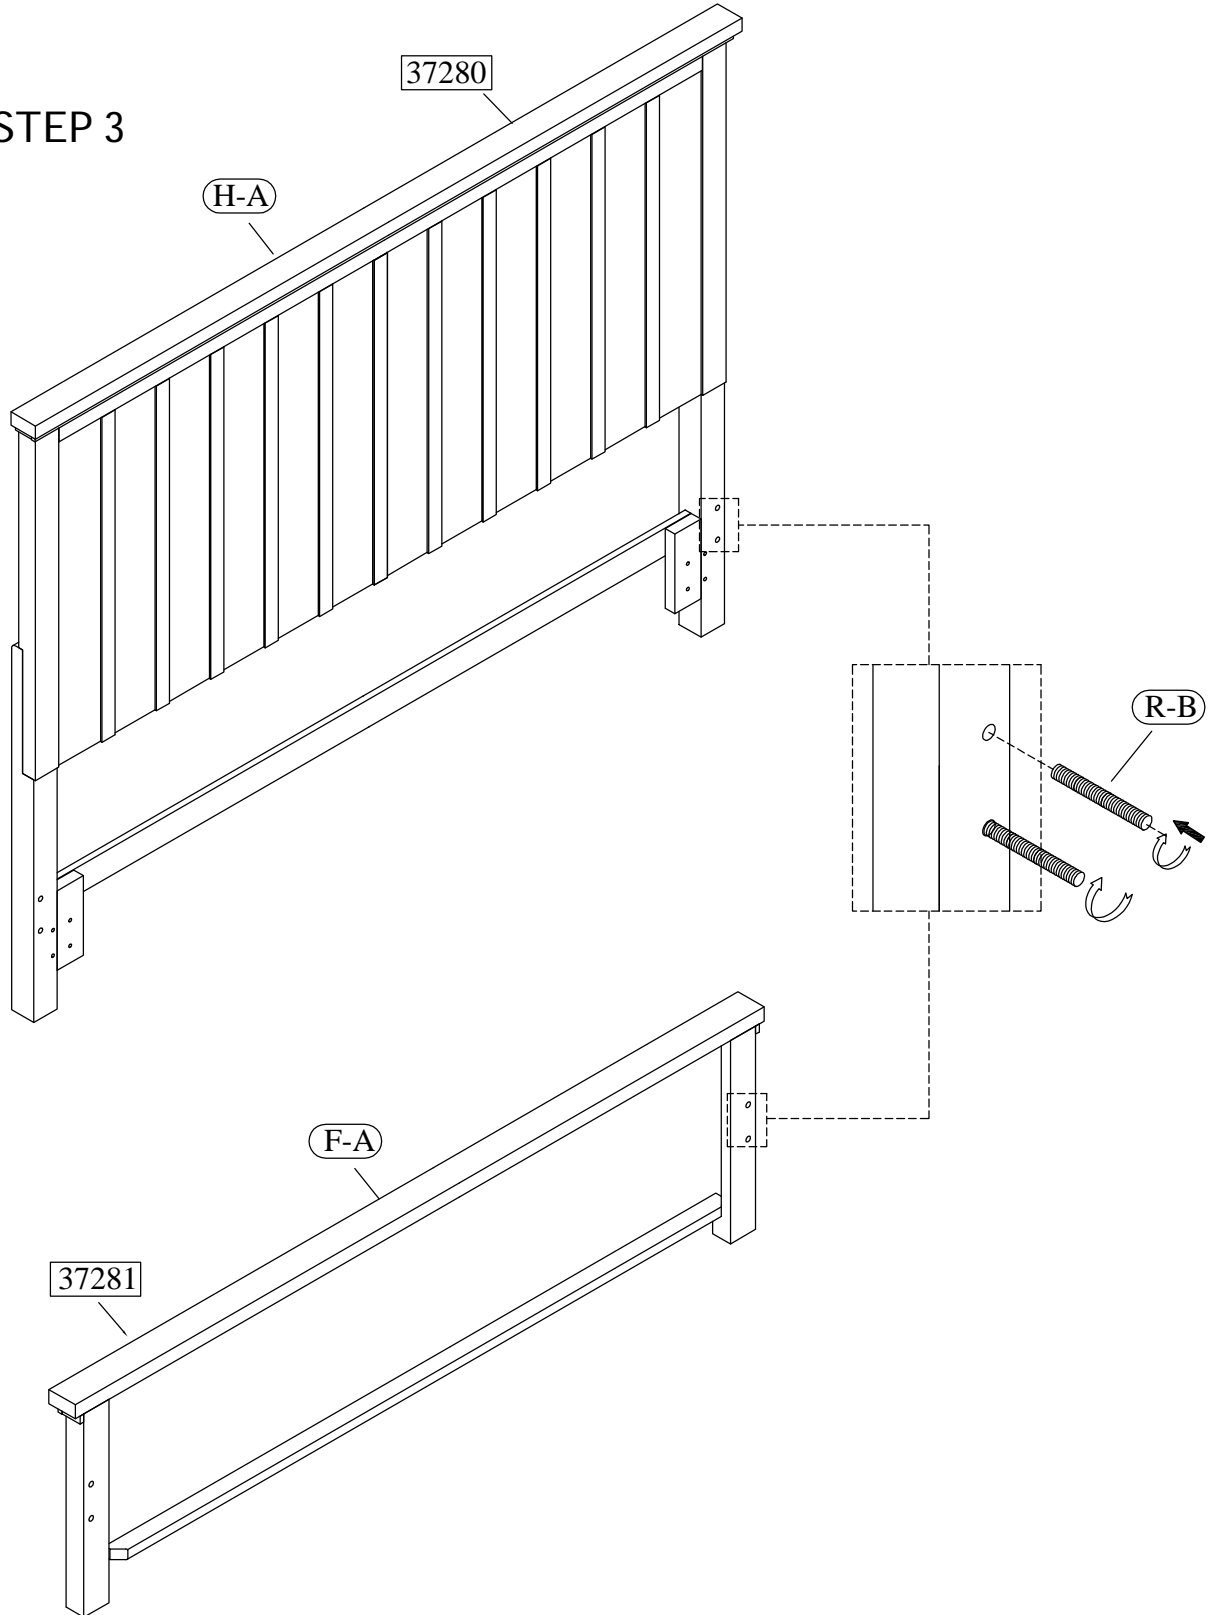


STEP 4

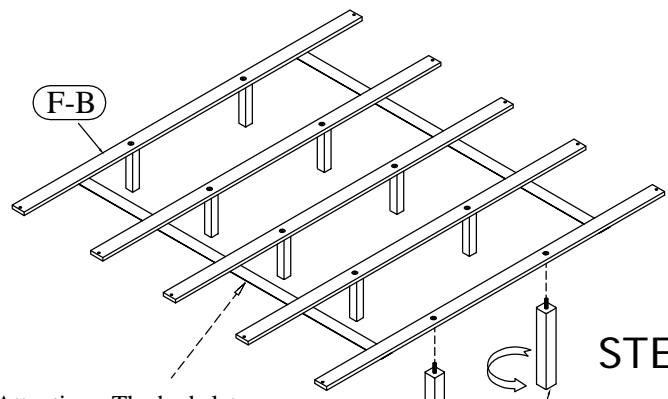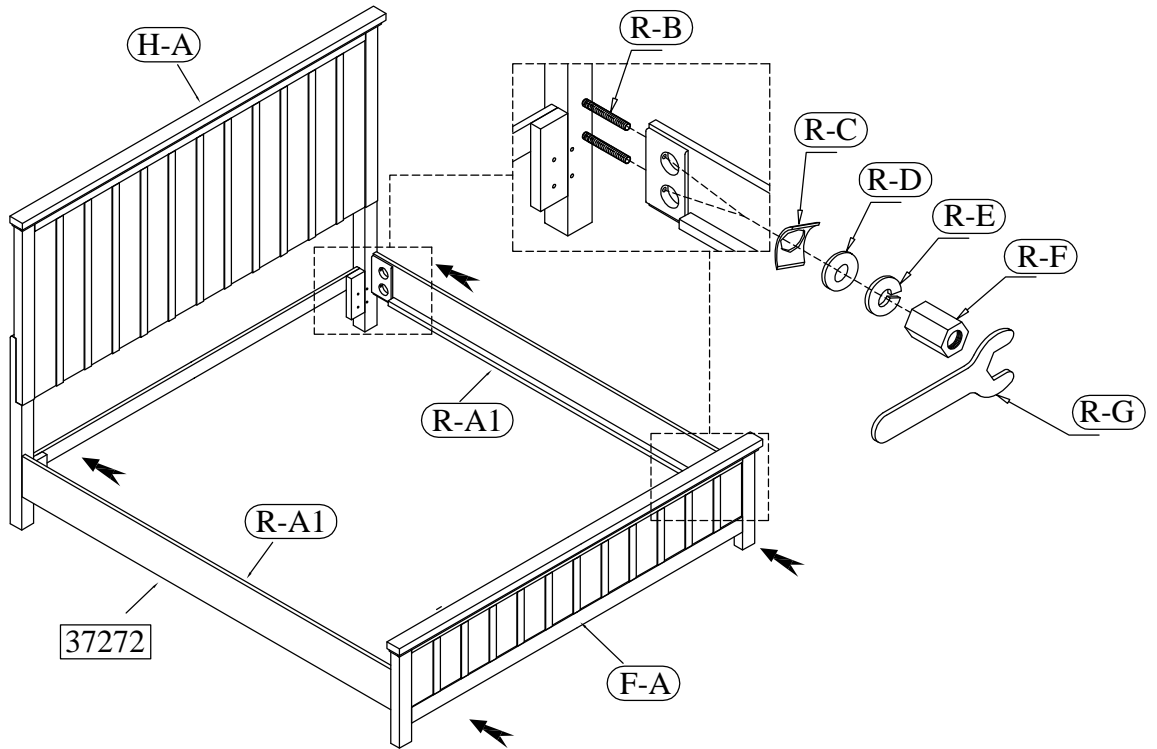

STEP 5


Attention : The bed slat straps should be located on the bottom side when properly installed.

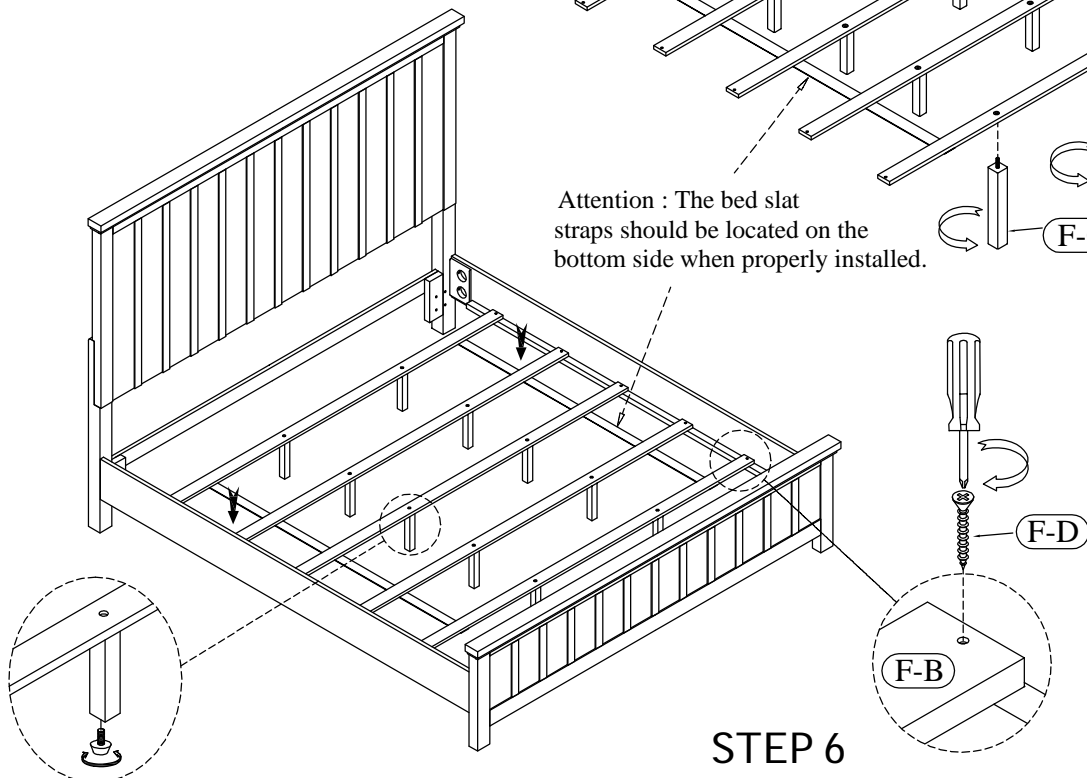


STEP 6

Adjustable Level

STEP 7

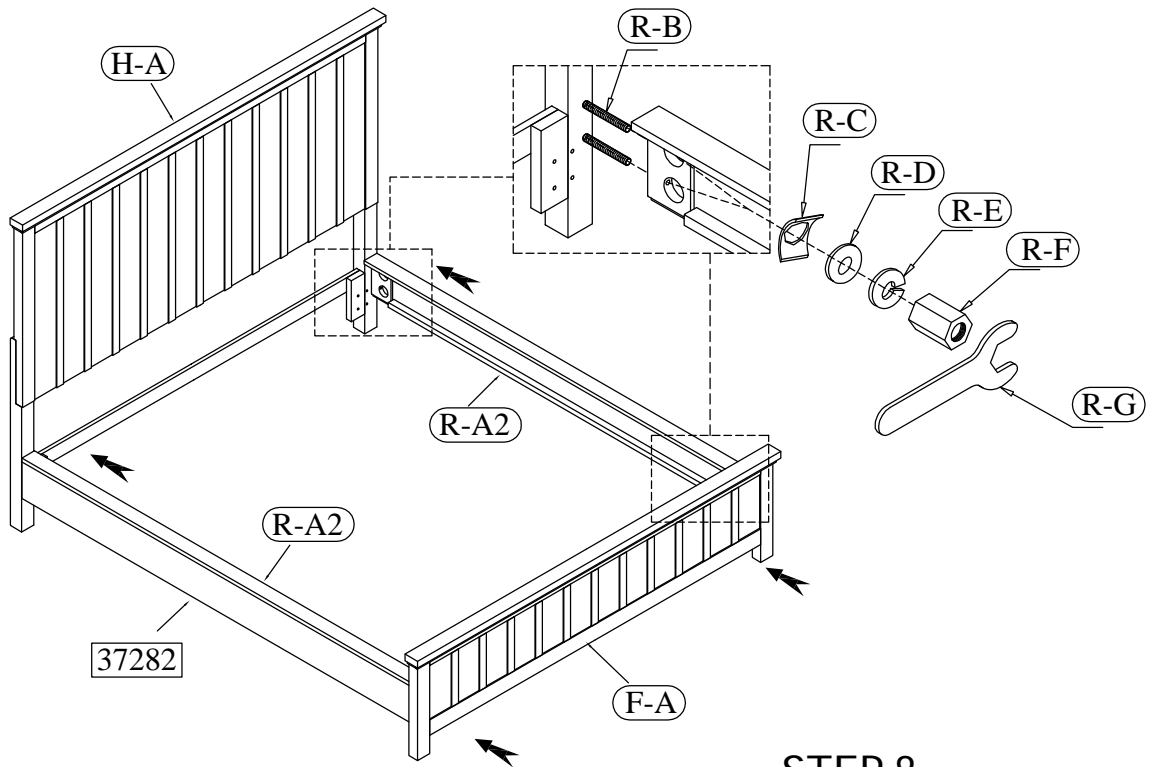


STEP 8

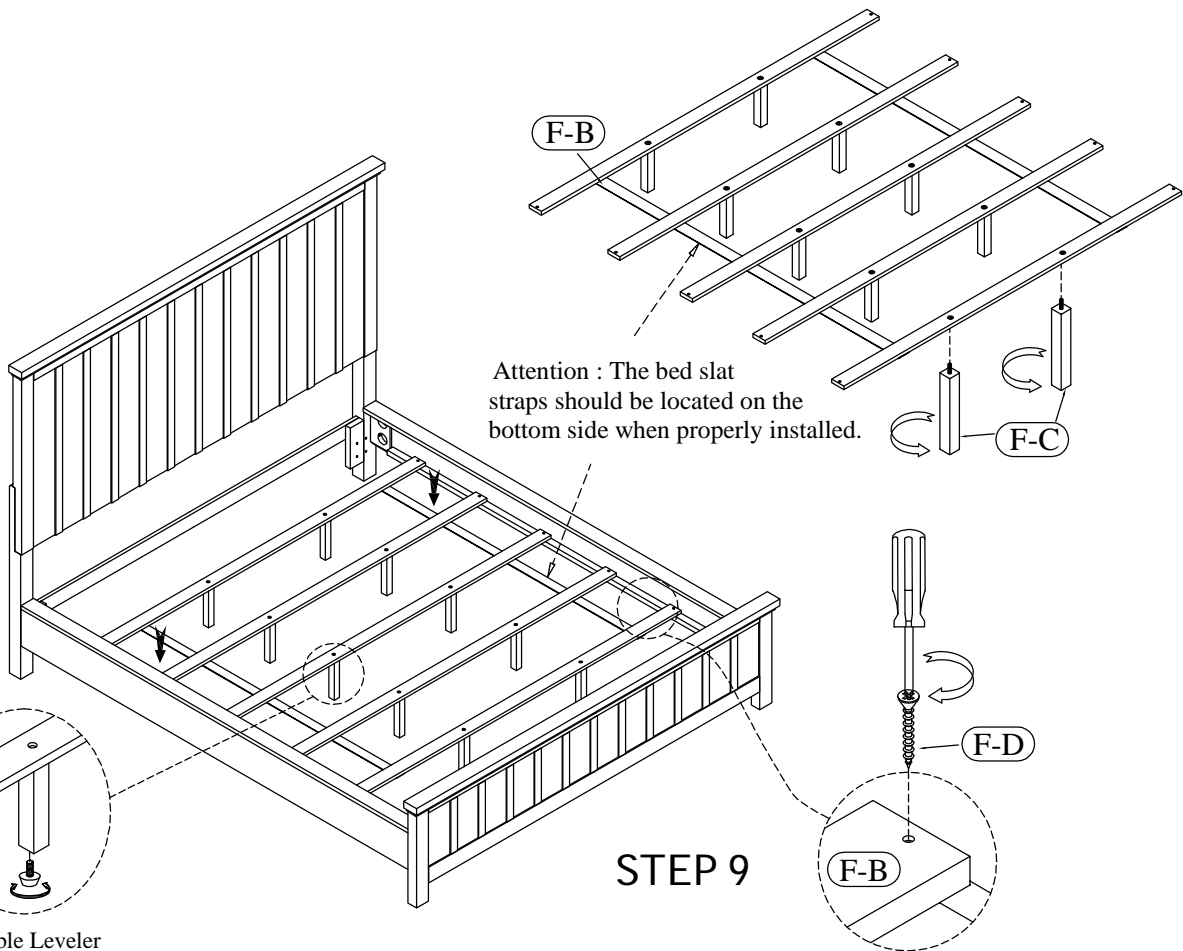

STEP 9

Adjustable Leveler

6/0- 6/6 King Bed
37280 -- 6/6-6/0 Panel Headboard

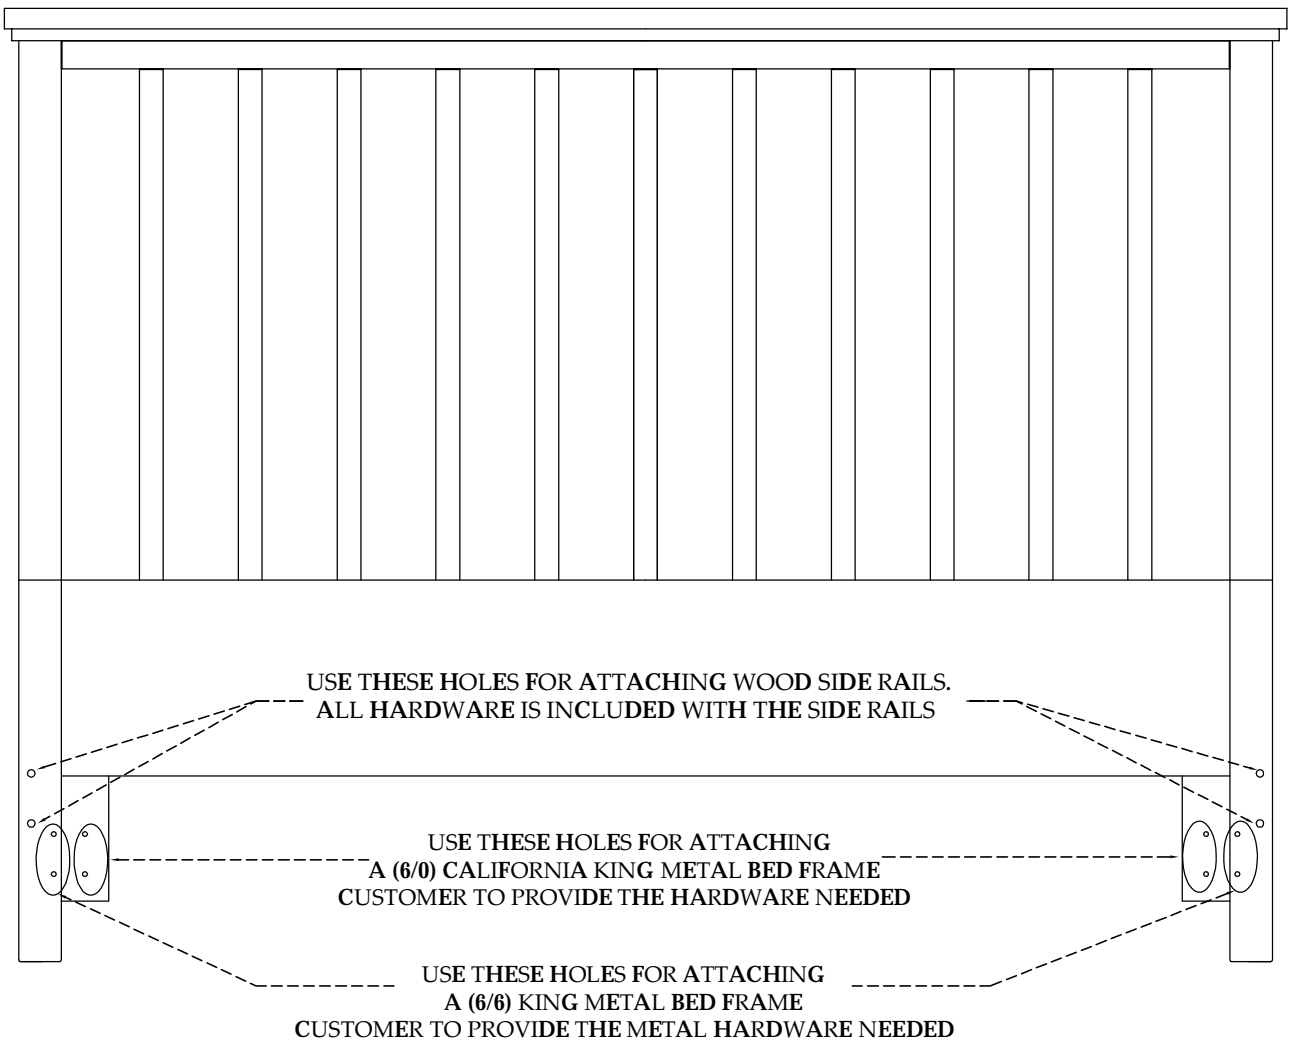

**THE HEADBOARD MAY BE USE ALONE WITH
A CALIFORNIA KING OR A STANDARD KING
SIZE METAL BED FRAME.**