info@riverside-furniture.com

Sophie Bedroom Assembly Instructions

Page 1 of 4

Made in Viet Nam
Oueen Panel Bed

Warning:


email:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.


Hardware and Parts packed with the Headboard



Hardware and Parts packed with the Footboard

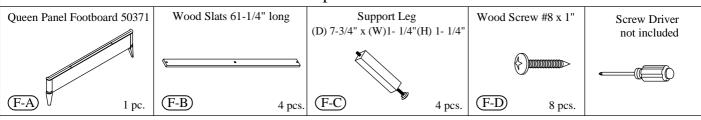


Hardware and Parts packed with the Bed Rail

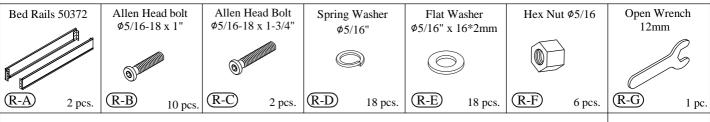

5/0 Queen Bed

50370 -- 4/6-5/0 Queen Panel Headboard 50371 -- 5/0 Queen Panel Footboard

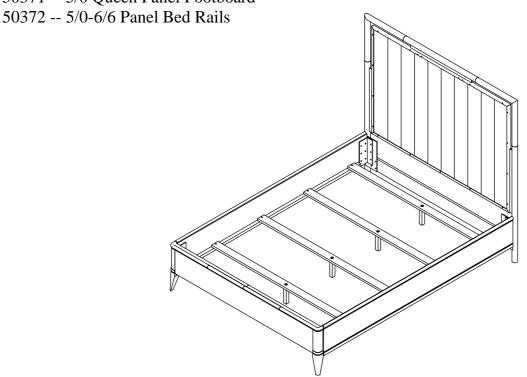

Allen Key 5mm





email: info@riverside-furniture.com

Sophie Bedroom Assembly Instructions

Page 2 of 4


Made in Viet Nam
Queen Panel Bed

5/0 Queen Bed

50370 -- 4/6-5/0 Queen Panel Headboard

50371 -- 5/0 Queen Panel Footboard

50372 -- 5/0-6/6 Panel Bed Rails

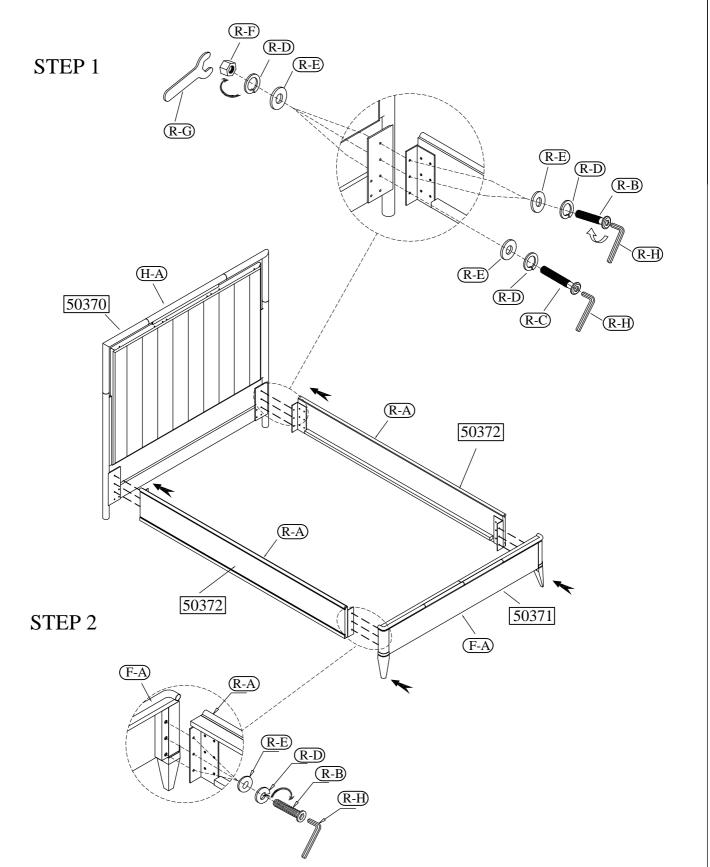


email: <u>info@riverside-furniture.com</u>

Sophie Bedroom Assembly Instructions

Page 3 of 4

Made in Viet Nam
Queen Panel Bed

STEP 3

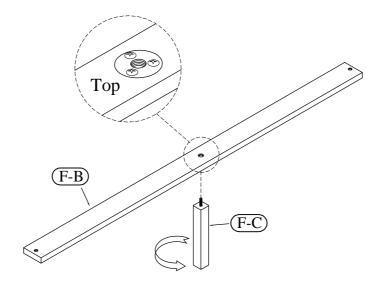





email:


info@riverside-furniture.com

Sophie Bedroom Assembly Instructions

Page 4 of 4

Made in Viet Nam
Oueen Panel Bed

5/0 Queen Bed 50370 -- 4/6-5/0 Queen Panel Headboard

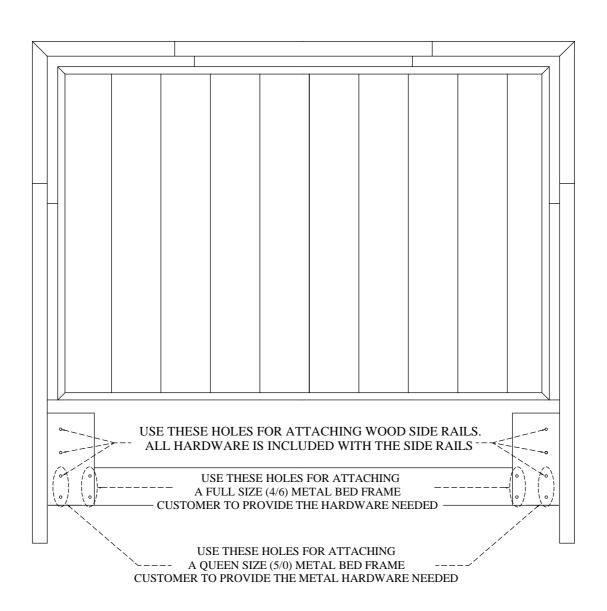

4/6 & 5/0 Bed THE HEADBOARD MAY BE USED ALONE WITH A QUEEN OR FULL SIZE METAL BED FRAME.