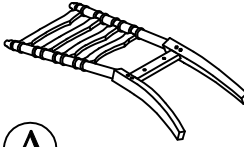


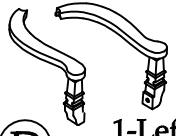
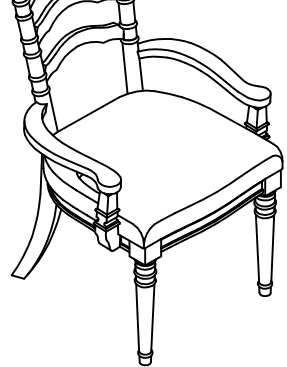







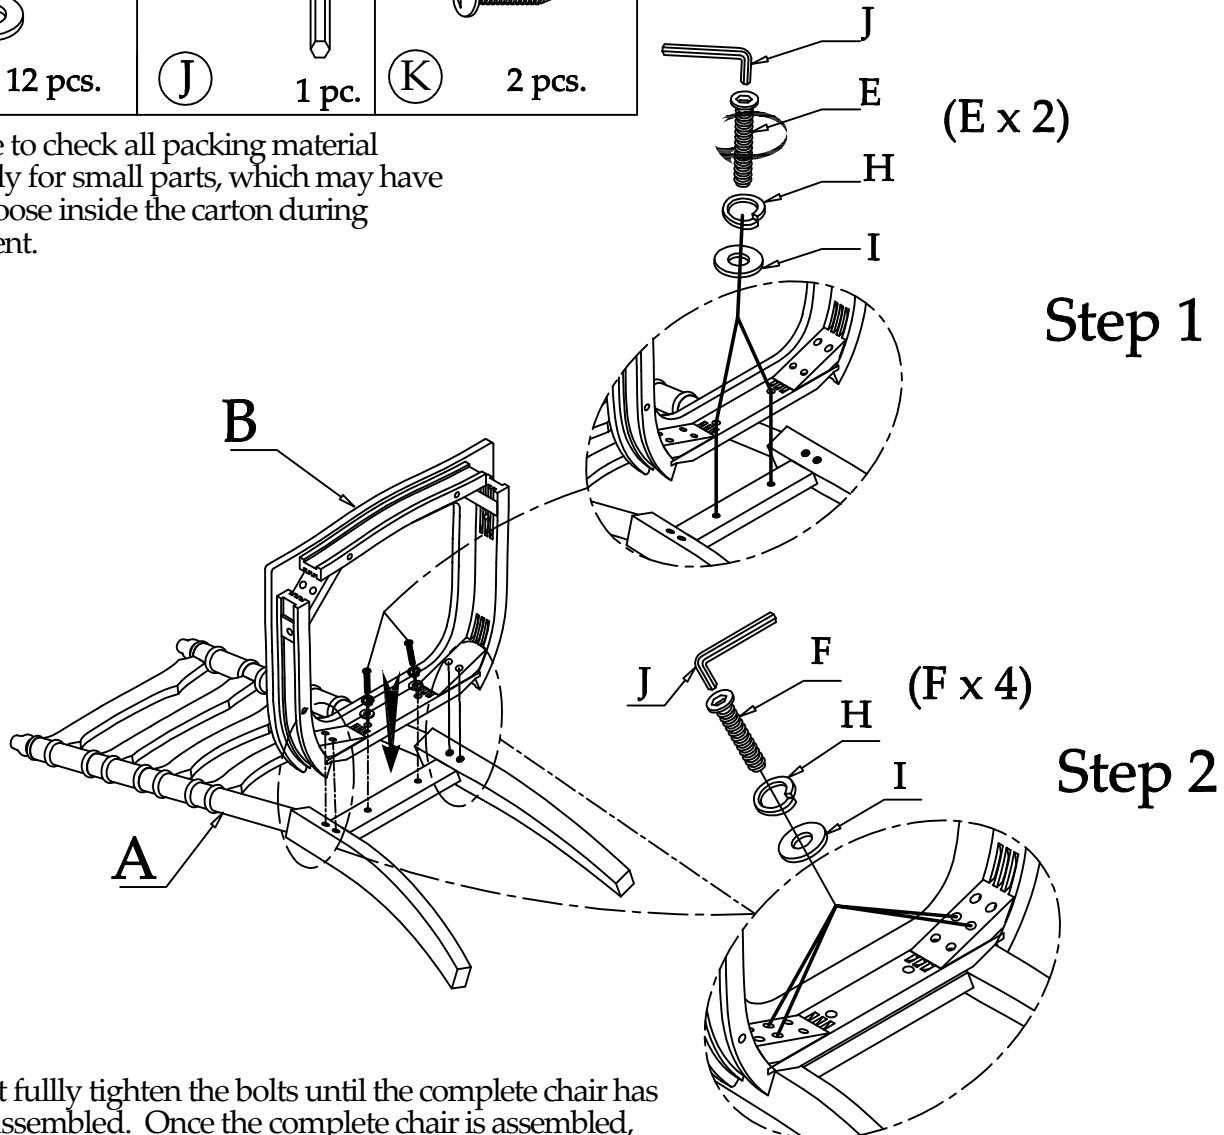


Components and Hardware List (for one chair)

<p><b>Back Frame</b></p>  <p><b>A</b> 1 pc.</p>	<p><b>Seat Frame</b></p>  <p><b>B</b> 1 pc.</p>	<p><b>Front Leg</b></p>  <p><b>C</b> 2 pcs.</p>	<p><b>Arm Chair</b></p>  <p><b>D</b> 1-Left 1-Right</p>	 <p>#71659 Uph Ladderback Arm Chair</p>
<p>M 5/16"-18 x 1-1/2" Allen Head Bolt</p>  <p><b>E</b> 4 pcs.</p>	<p>M5/16"-18 x 2-1/2" Allen Head Bolt</p>  <p><b>F</b> 4 pcs.</p>	<p>M 5/16"-18 x 2" Allen Head Bolt</p>  <p><b>G</b> 4 pcs.</p>	<p>5/16" Spring Washer</p>  <p><b>H</b> 12 pcs.</p>	
<p>5/16" x 19 x 2mm Flat Washer</p>  <p><b>I</b> 12 pcs.</p>	<p>5mm Allen Wrench</p>  <p><b>J</b> 1 pc.</p>	<p>#8 x 1-1/4" Wood Screw</p>  <p><b>K</b> 2 pcs.</p>		

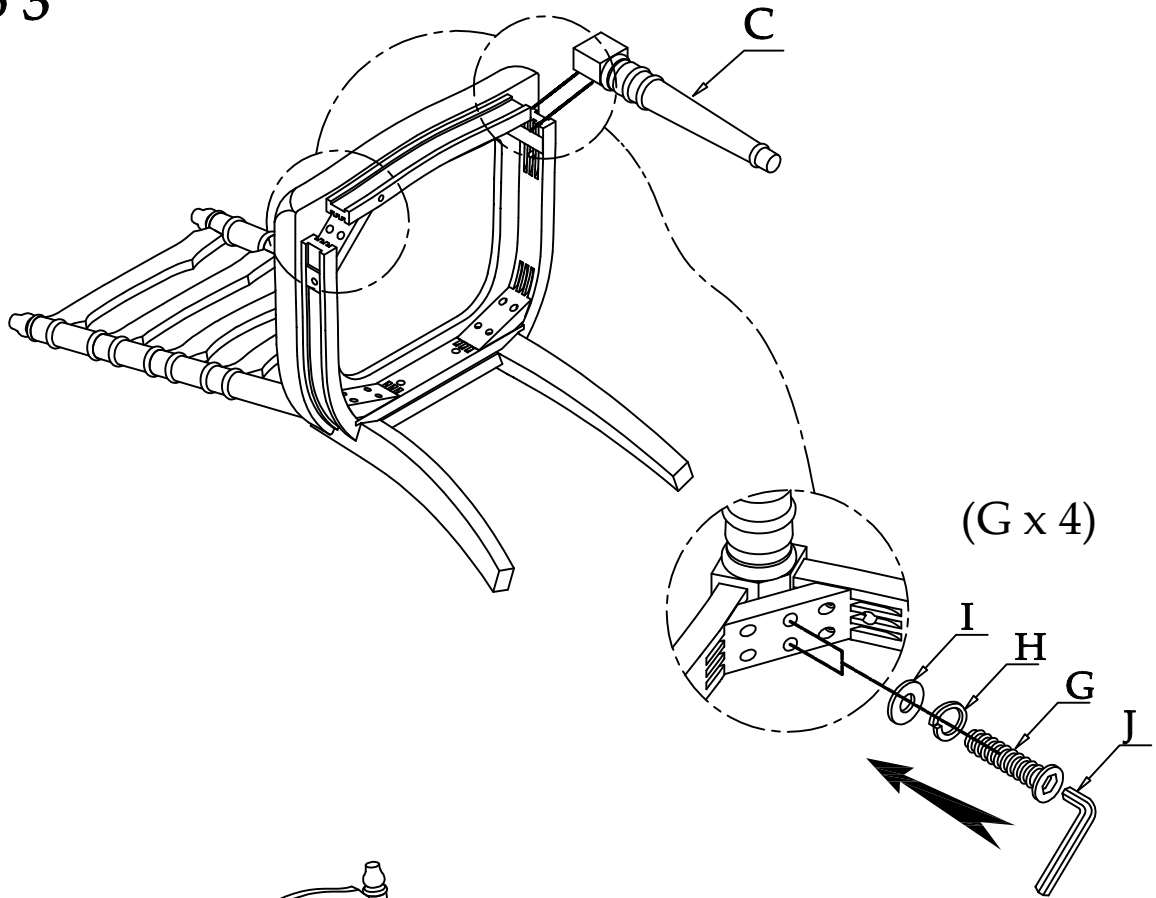
Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.



Do not fully tighten the bolts until the complete chair has been assembled. Once the complete chair is assembled, set it upright on a flat surface to level the chair.

Make sure all joints are pulled tight and then install the wood screws in the back of the arms and tighten all the bolts using the provided allen wrench.

### Step 3



### Step 4

