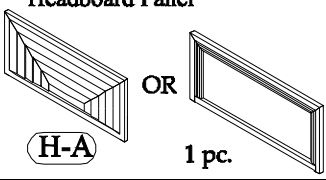
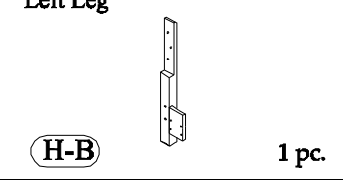
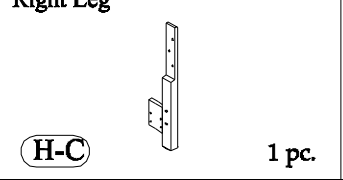
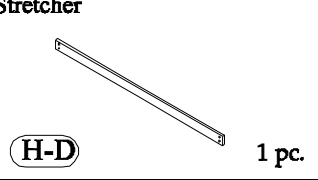
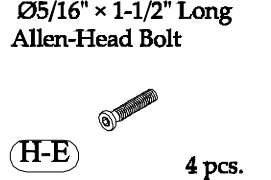
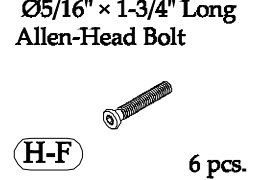
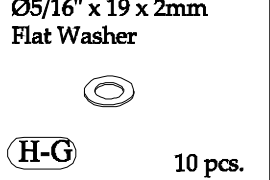
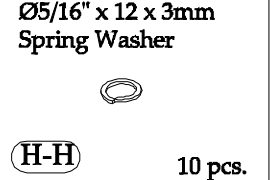
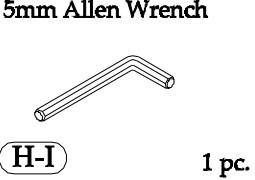







Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.







Hardware and Parts packed with the Headboard

<p>Headboard Panel</p>  <p>(H-A) 1 pc.</p>	<p>Left Leg</p>  <p>(H-B) 1 pc.</p>	<p>Right Leg</p>  <p>(H-C) 1 pc.</p>	<p>Stretcher</p>  <p>(H-D) 1 pc.</p>	
<p>Ø5/16" x 1-1/2" Long Allen-Head Bolt</p>  <p>(H-E) 4 pcs.</p>	<p>Ø5/16" x 1-3/4" Long Allen-Head Bolt</p>  <p>(H-F) 6 pcs.</p>	<p>Ø5/16" x 19 x 2mm Flat Washer</p>  <p>(H-G) 10 pcs.</p>	<p>Ø5/16" x 12 x 3mm Spring Washer</p>  <p>(H-H) 10 pcs.</p>	<p>5mm Allen Wrench</p>  <p>(H-I) 1 pc.</p>

Hardware and Parts packed with the Footboard

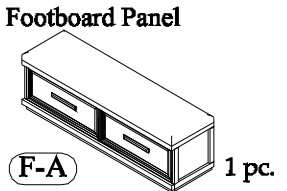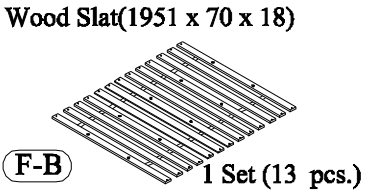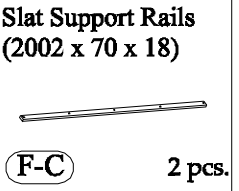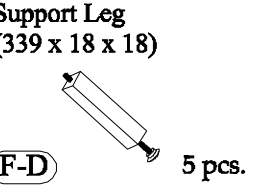
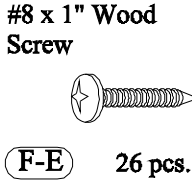
<p>Footboard Panel</p>  <p>(F-A) 1 pc.</p>	<p>Wood Slat(1951 x 70 x 18)</p>  <p>(F-B) 1 Set (13 pcs.)</p>	<p>Slat Support Rails (2002 x 70 x 18)</p>  <p>(F-C) 2 pcs.</p>	<p>Support Leg (339 x 18 x 18)</p>  <p>(F-D) 5 pcs.</p>	<p>#8 x 1" Wood Screw</p>  <p>(F-E) 26 pcs.</p>
--	--	--	---	---

Hardware and Parts packed with the Bed Rails

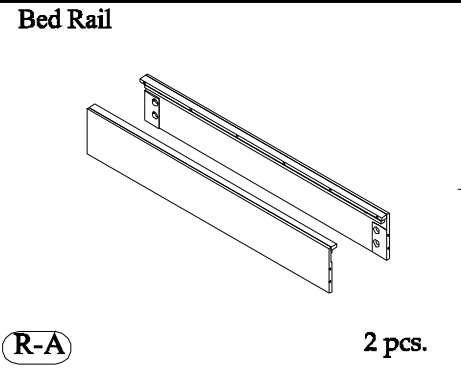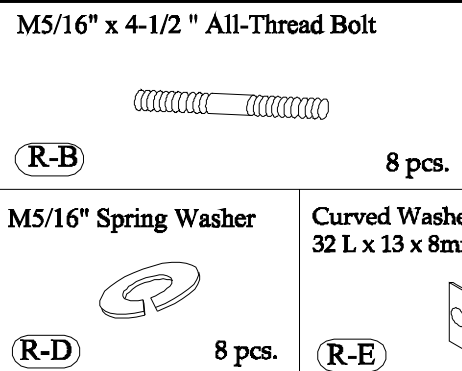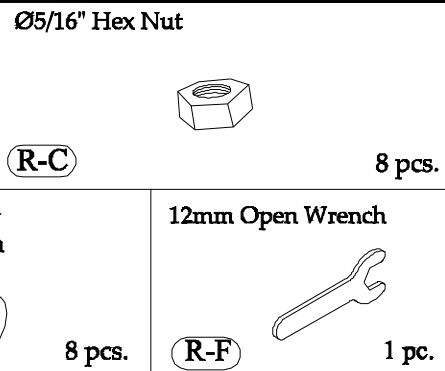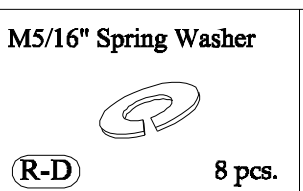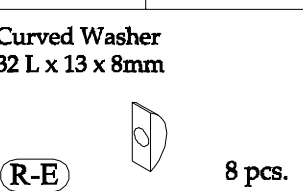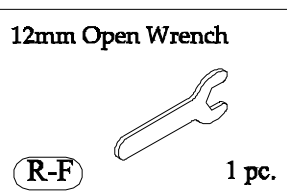
<p>Bed Rail</p>  <p>(R-A) 2 pcs.</p>	<p>M5/16" x 4-1/2 " All-Thread Bolt</p>  <p>(R-B) 8 pcs.</p>	<p>Ø5/16" Hex Nut</p>  <p>(R-C) 8 pcs.</p>	
	<p>M5/16" Spring Washer</p>  <p>(R-D) 8 pcs.</p>	<p>Curved Washer 32 L x 13 x 8mm</p>  <p>(R-E) 8 pcs.</p>	<p>12mm Open Wrench</p>  <p>(R-F) 1 pc.</p>

73486 6/0-6/6 Panel Headboard
73483 6/6 Uph Storage Footboard
73489 6/0 Storage Bed Rails

73480 6/0-6/6 Panel Headboard
73483 6/6 Uph Storage Footboard
73489 6/0 Storage Bed Rails

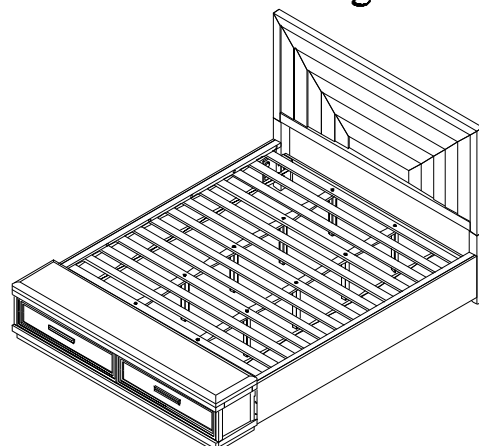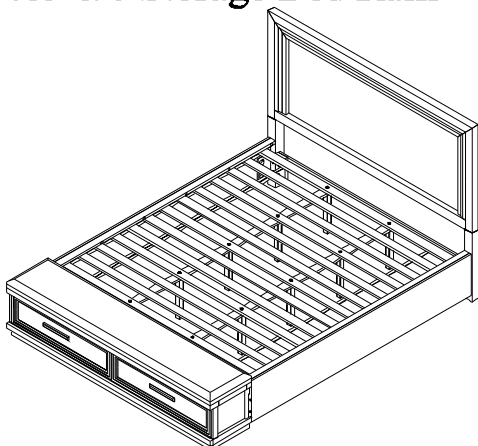


STEP 1

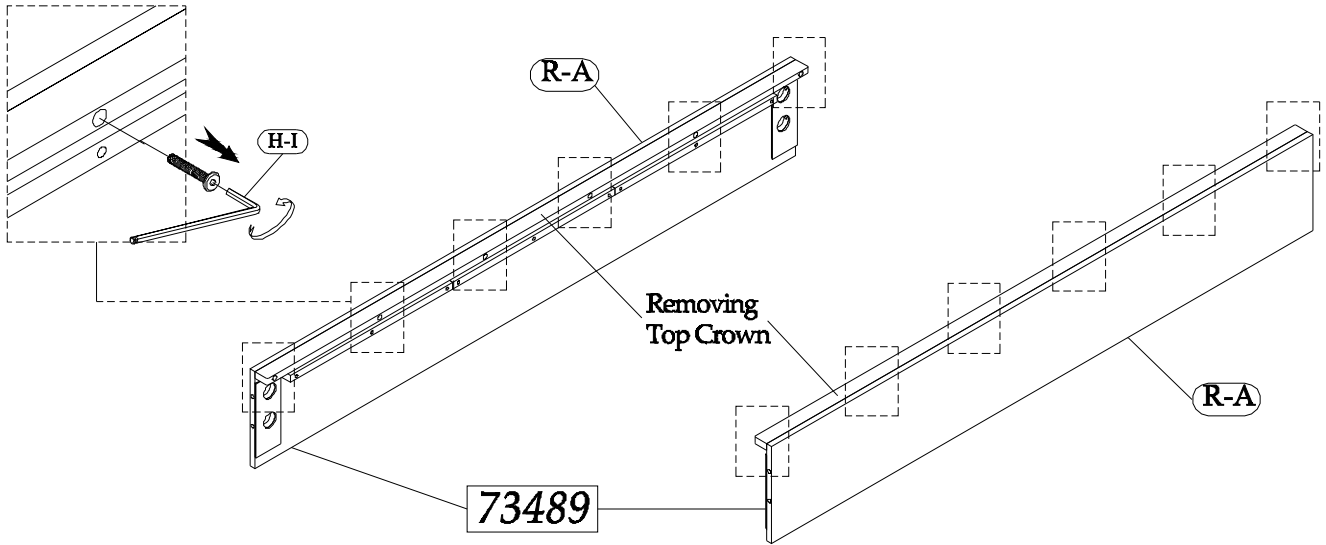


STEP 2

73480 6/0-6/6 Panel Headboard

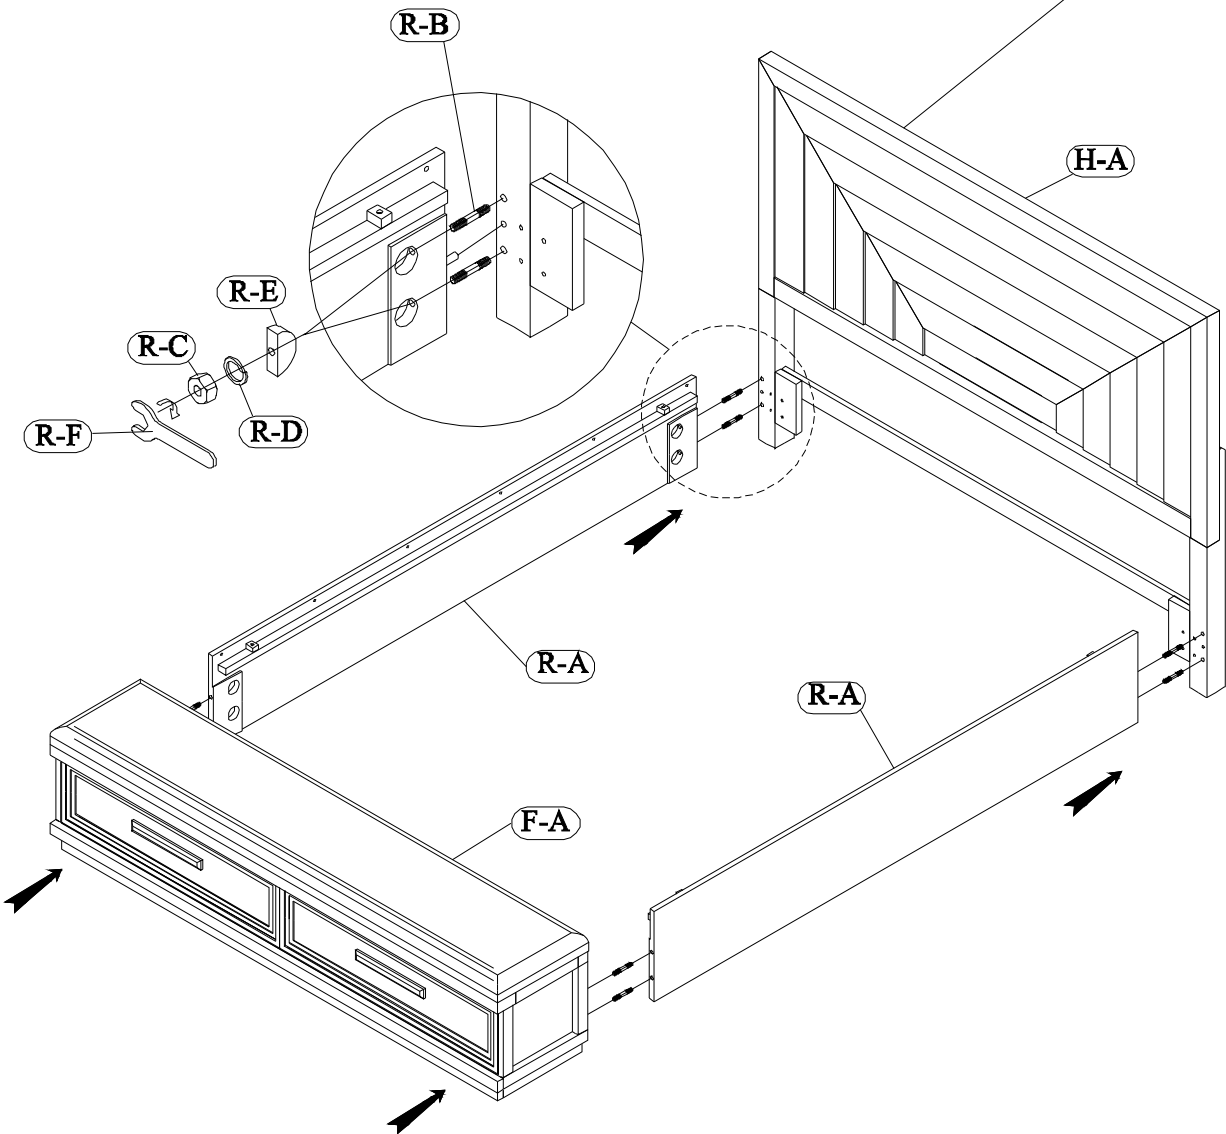


STEP 3

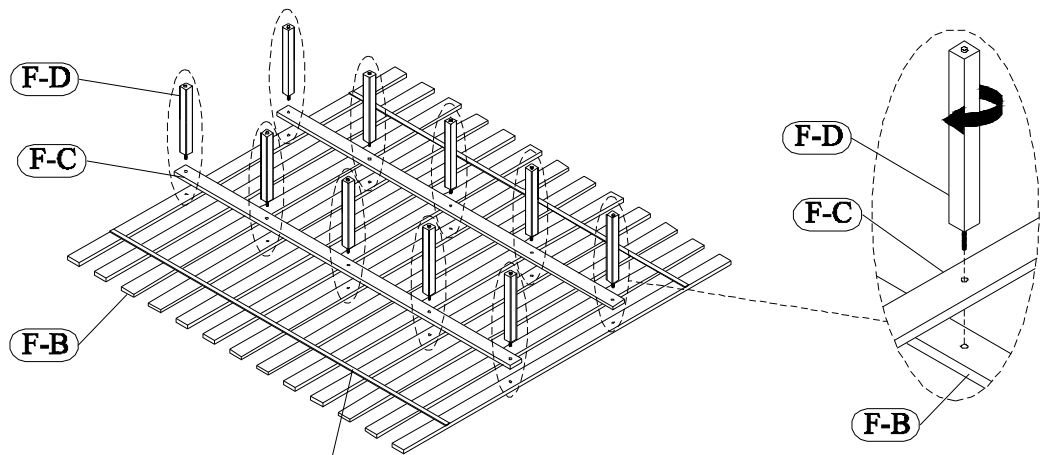


Attention : The bed slat straps link is located below

STEP 4

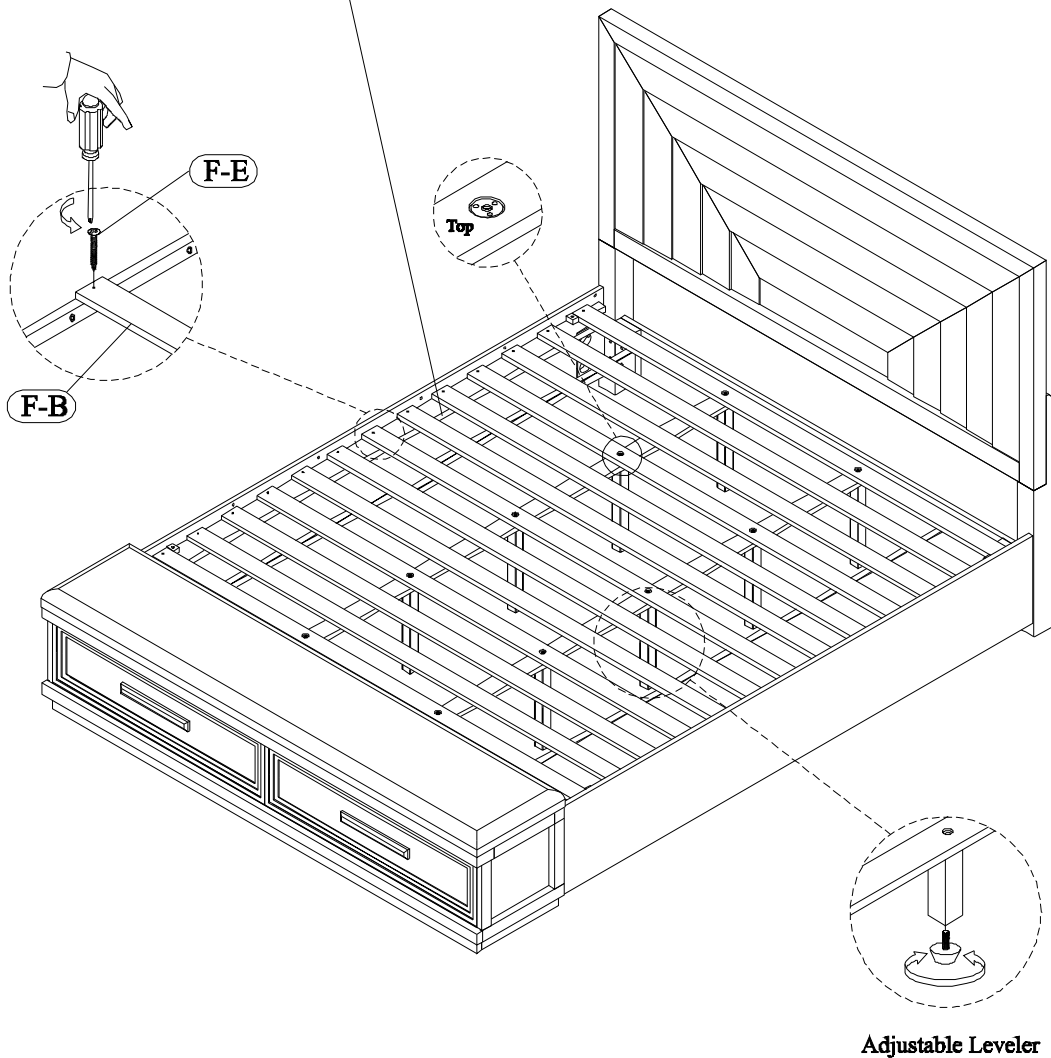

Adjustable Leveler

STEP 5

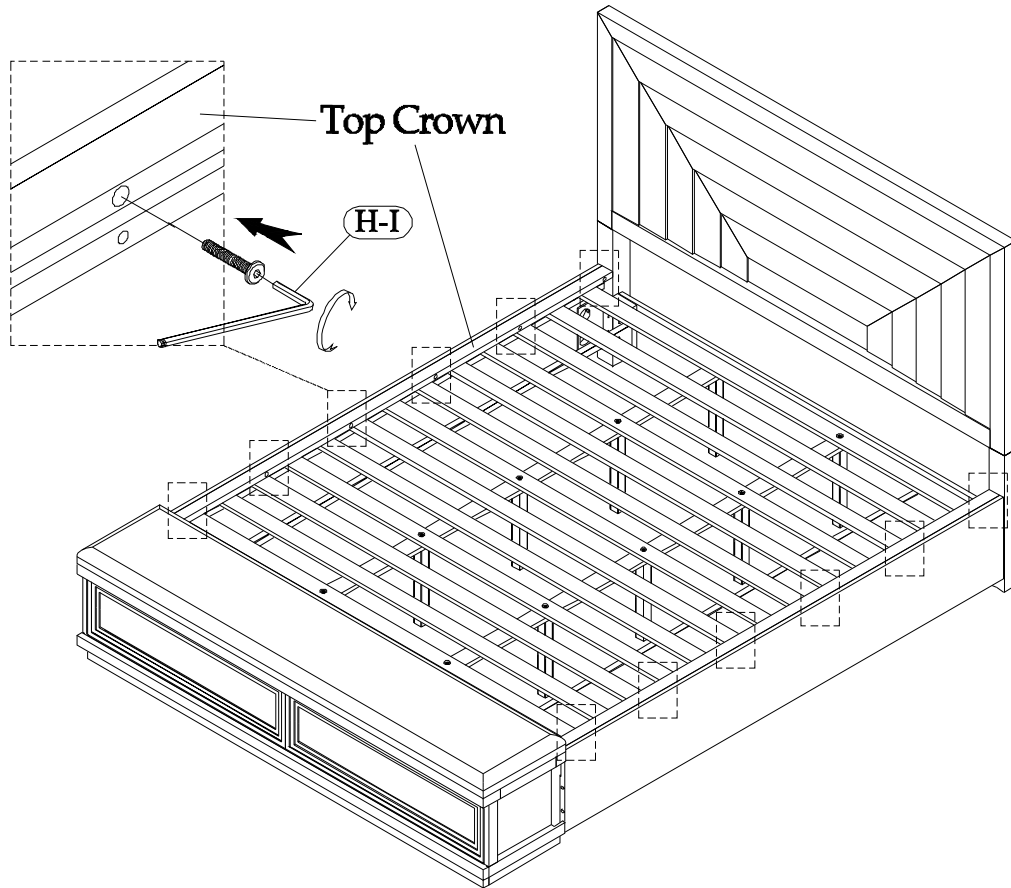

Complete

