

email: info@riverside-furniture.com

Davie Bedroom Assembly Instructions


Page 1 of 5

Made in Viet Nam

4/6-5/0 Queen Bed


Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture MUST BE ASSEMBLED BY TWO PEOPLE on a soft surface such as a blanket or carpet.

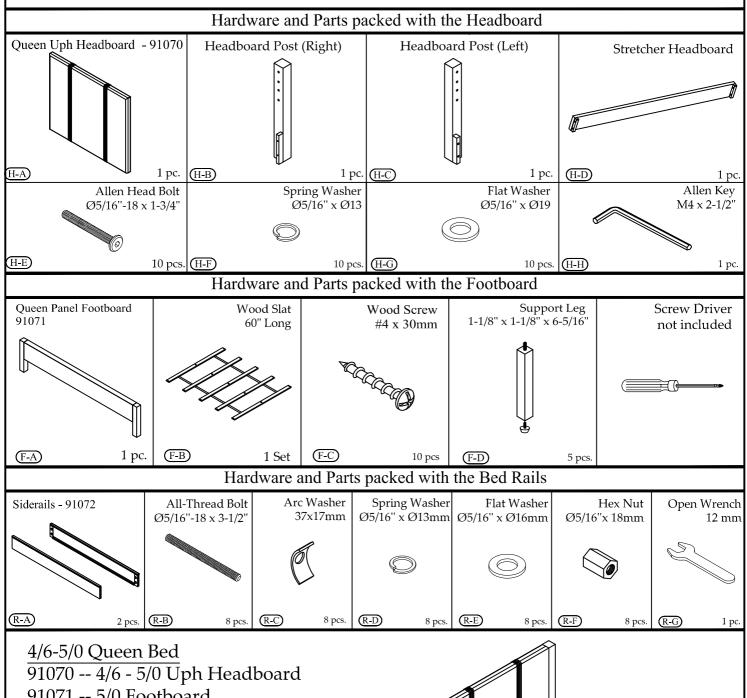

91071 -- 5/0 Footboard

91072 -- 5/0 - 6/0 Siderails

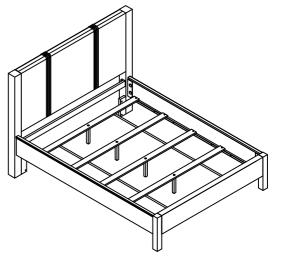

Riverside


email: info@riverside-furniture.com


Davie Bedroom Assembly Instructions

Page 2 of 5

Made in Viet Nam

4/6-5/0 Queen Bed

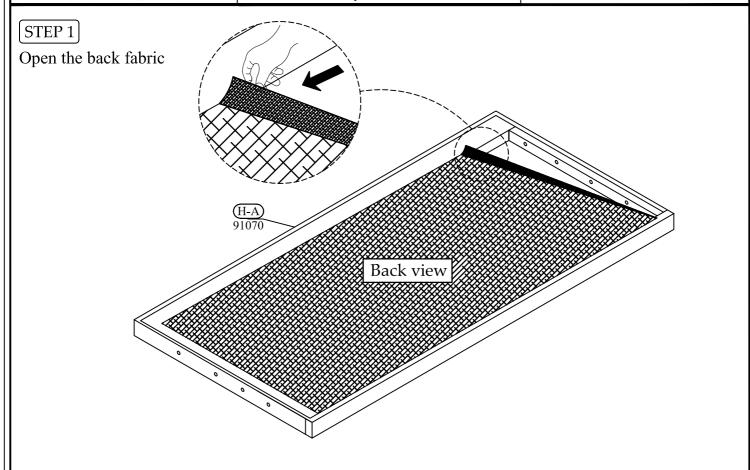

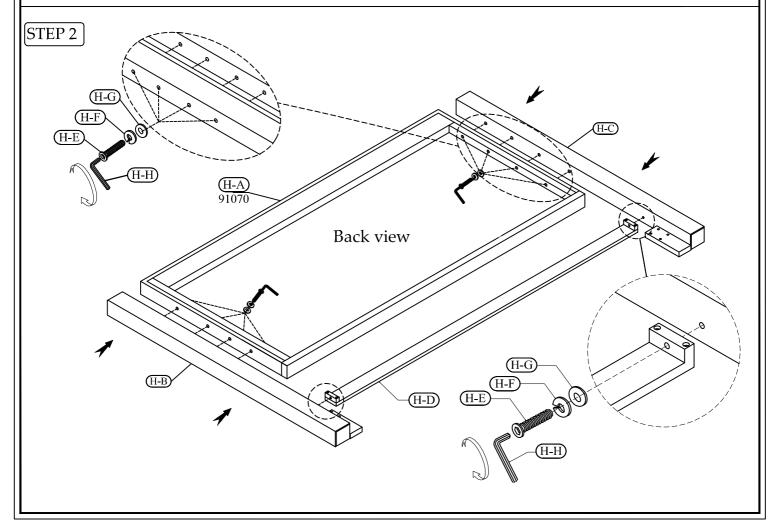

Davie Page 3 of 5 Riverside Bedroom Made in Viet Nam Assembly Instructions 4/6-5/0 Queen Bed email: info@riverside-furniture.com STEP 3 STEP 4 (R-C)

Riverside


email: info@riverside-furniture.com


Davie Bedroom Assembly Instructions

Page 4 of 5

Made in Viet Nam

4/6-5/0 Queen Bed

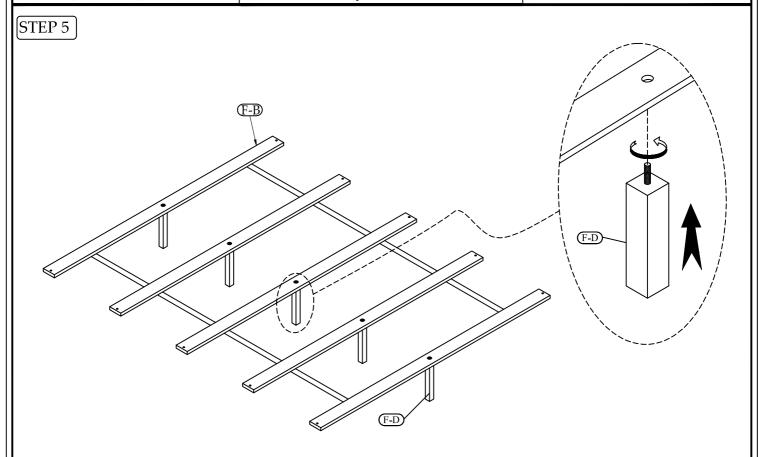

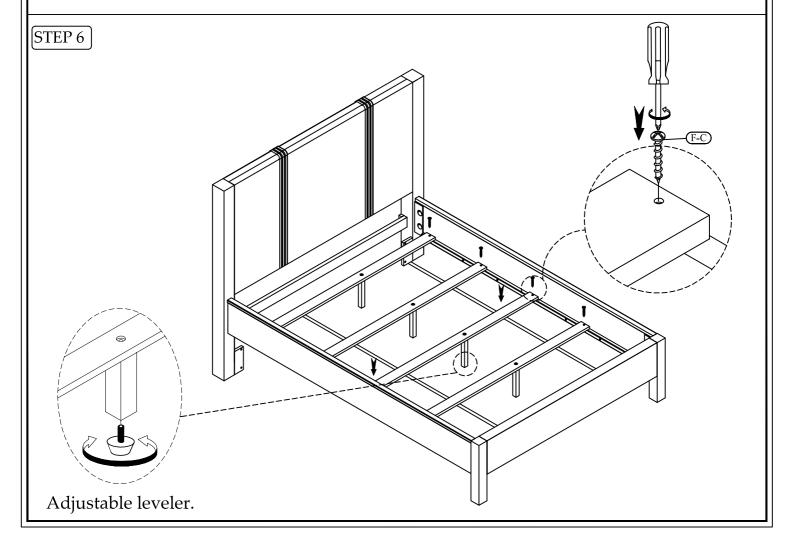



email: info@riverside-furniture.com


Davie Bedroom Assembly Instructions

Page 5 of 5

Made in Viet Nam

4/6-5/0 Queen Bed

4/6-5/0 Queen Bed 91070 - 4/6 - 5/0 Uph Headboard

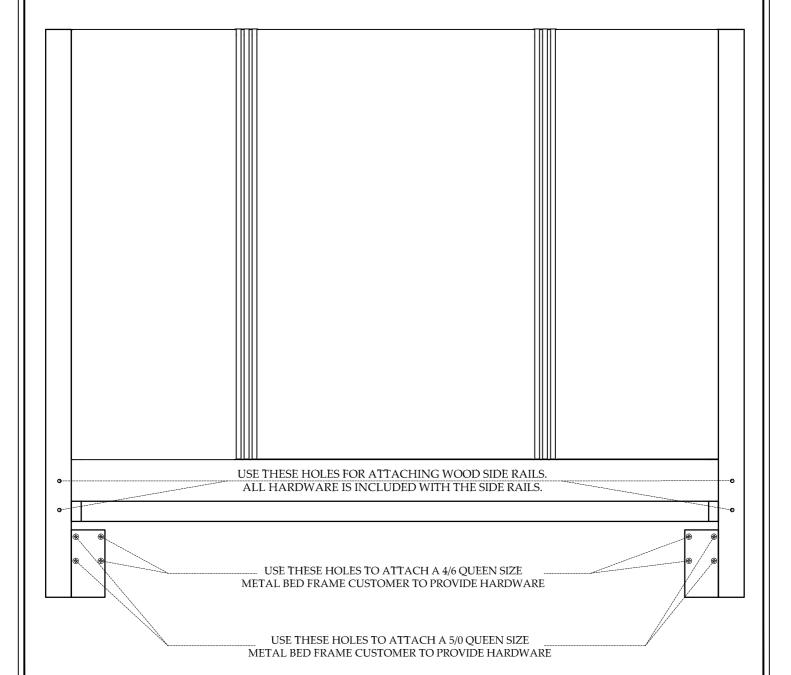

The headboard may be used alone with a Queen size metal bed frame.